


Guidelines

V  
mk2  
R



~ 45 mn - 60 mn

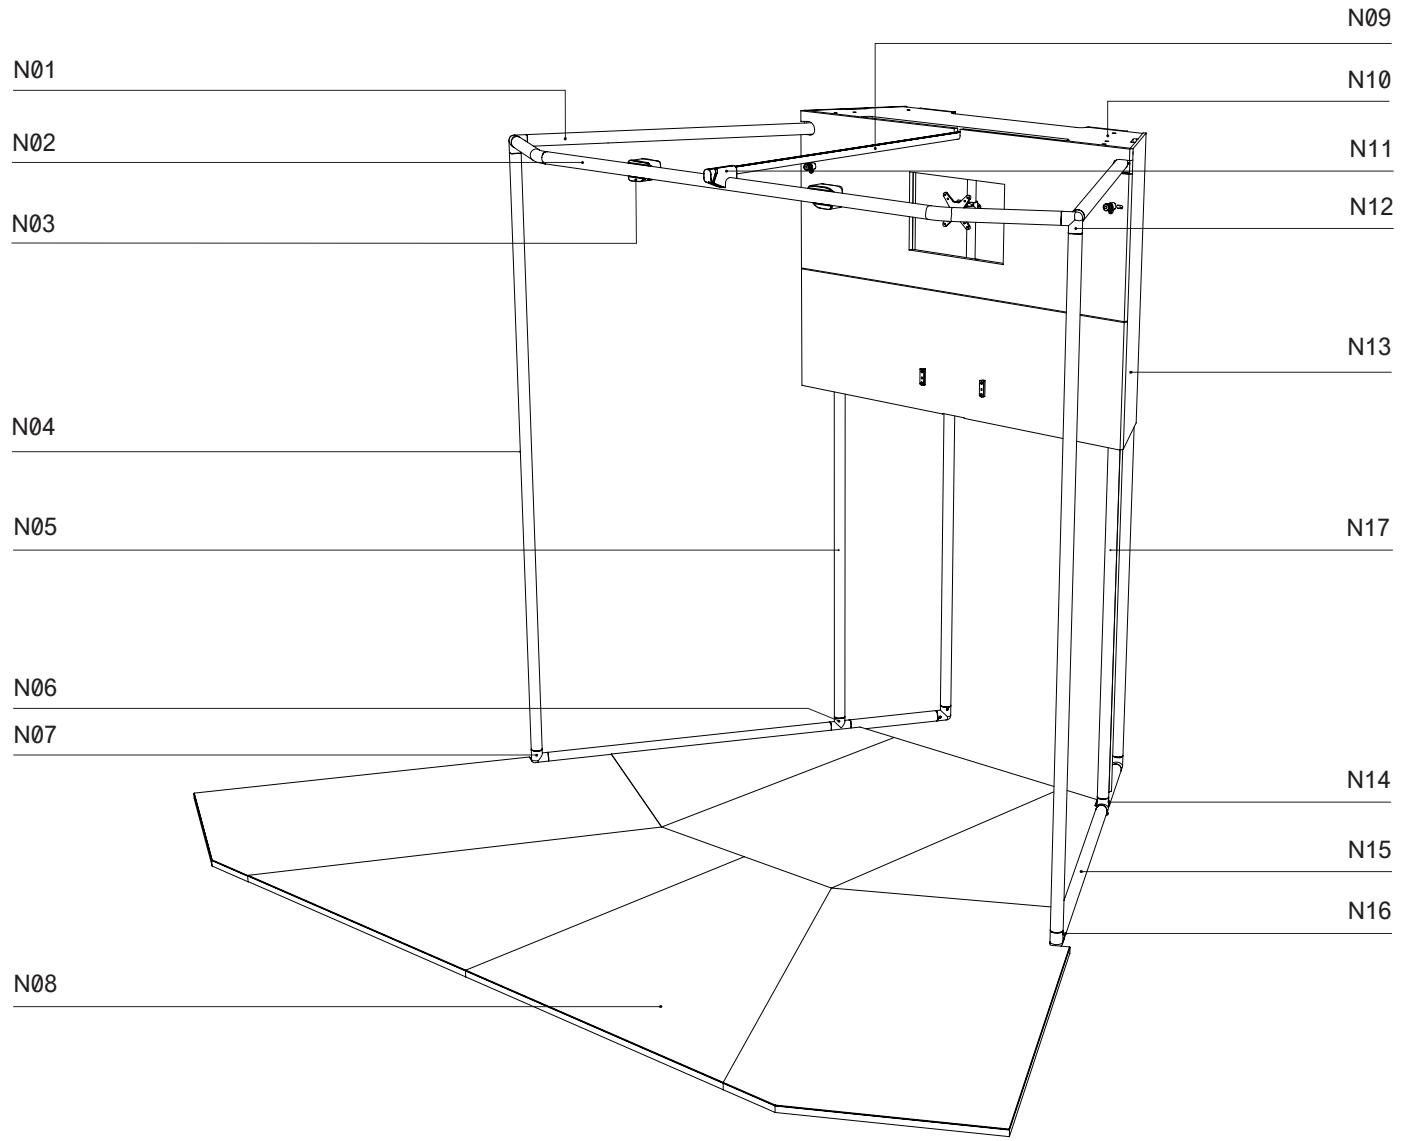


N01	Tubes	2x
N02	Curved Bar	1x
N03	Cable Retractor	2x
N04	Tubes	4x
N05	Tubes	1x
N06	ITAS	2x
N07	ITAS	6x
N08	Floor	7x
N09	Cable Conduit	1x
N10	Box	1x

N11	Cable Tie	1x
N12	ITAS	2x
N13	Side Panels	2x
N14	Flat Bar	1x
N15	Tubes	2x
N16	Flat Bar	1x
N17	Tubes	1x


Tools (incl. in pack 2)		
BTR 05.	BTR 04.	BTR 03.

# YOUR PACKAGE


Pack 1. Box

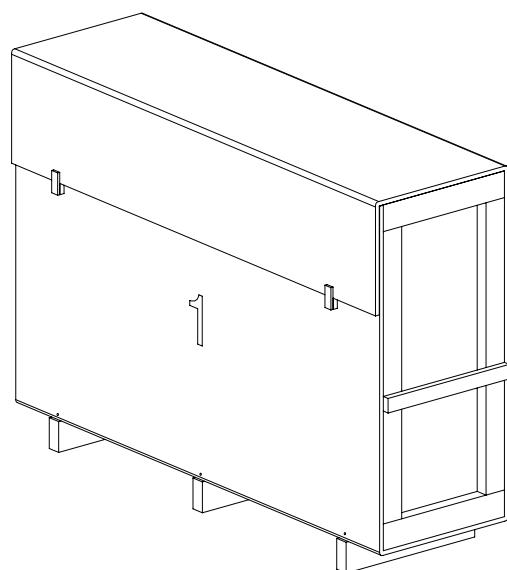

Pack 2. Tubes

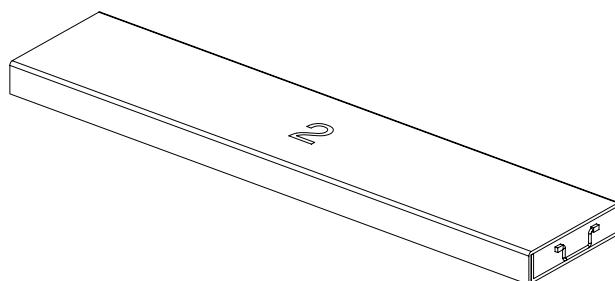




Pack 3. Flooring

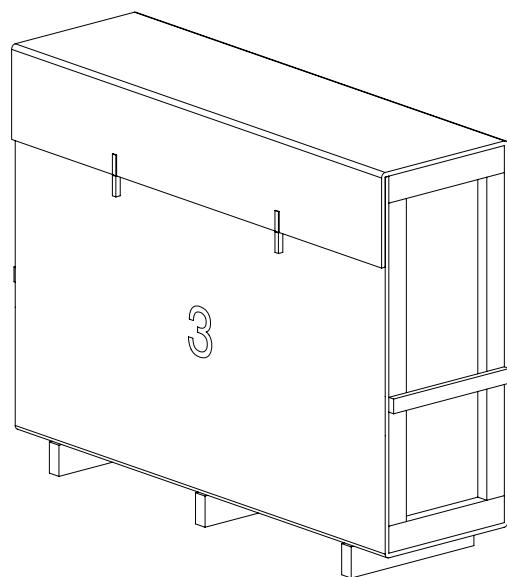

 *Mounting : 2 robust structural points, height  $\approx$  45 cm*  
Ex. Stools, coffee tables, pallets...




## 1. Pack 1. Box

- Remove the screws from the front of the Box.
- Remove the front of the Box.

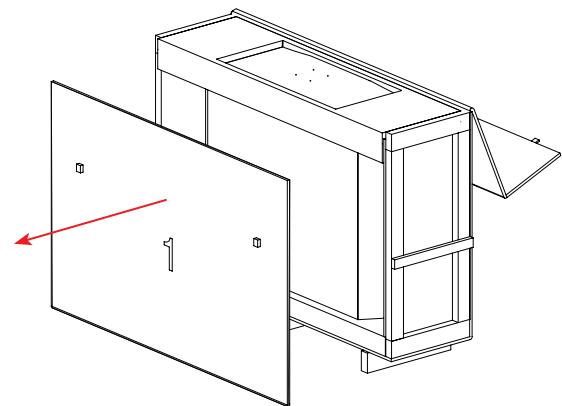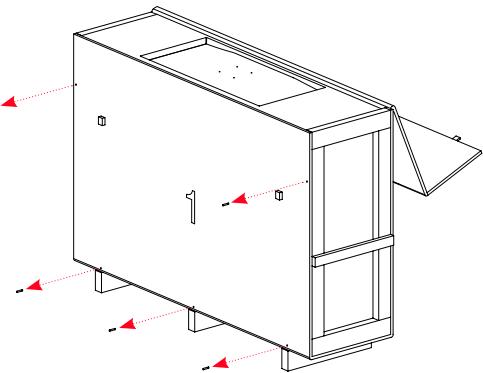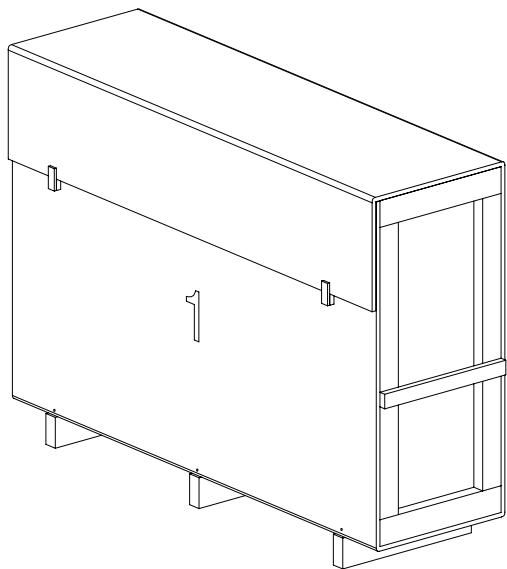


## 2.

- Set aside the TV Box.
- Remove the Side Panels from the sides of the Box.
- Remove the Box from the pack (lift with the red bar on the illustration).
- Remove the VESA from the Box before starting installation.

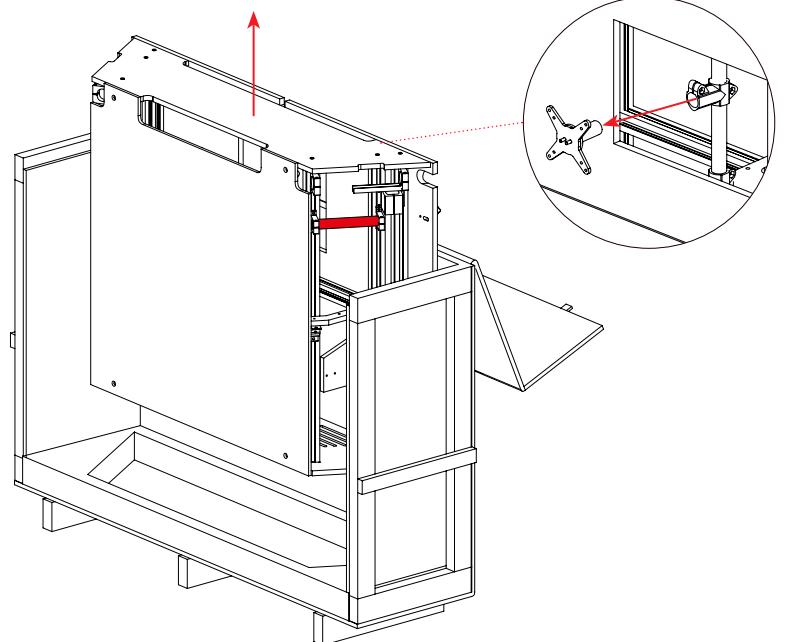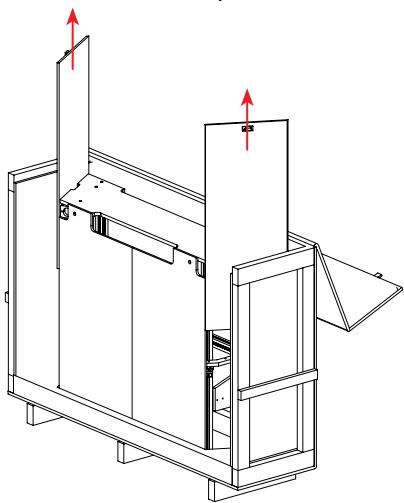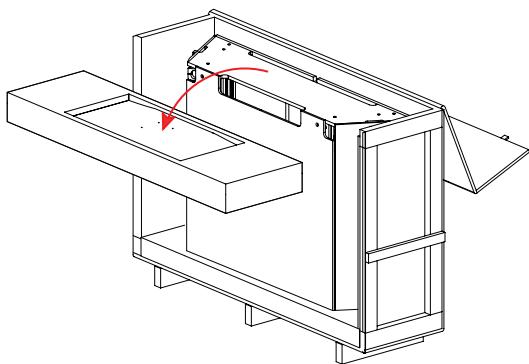


### 3. Installation

- Position the Box onto 2 to 3 mounting structures.

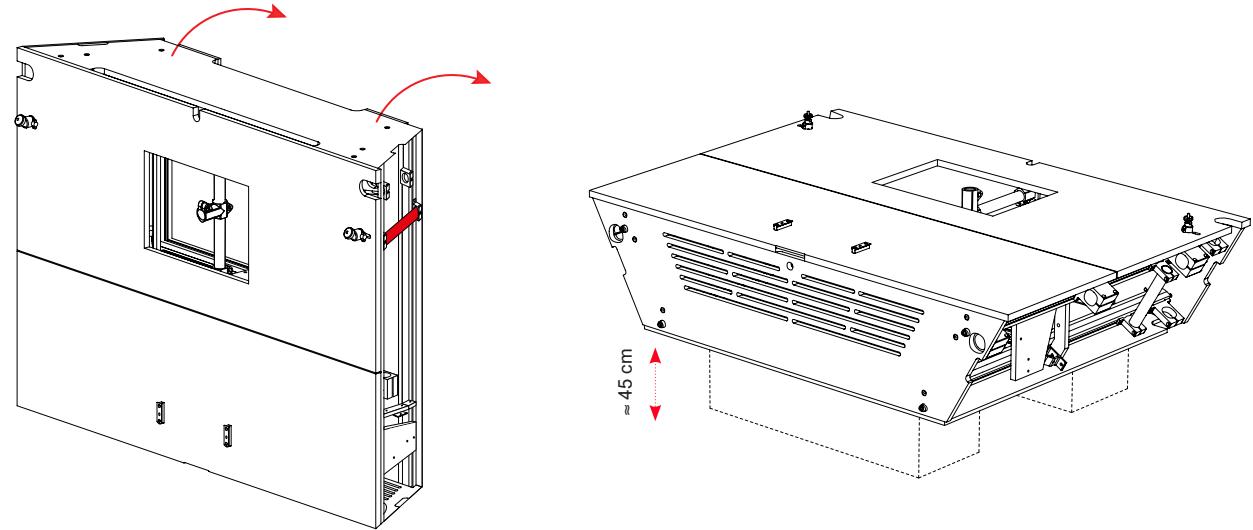


### 4. Pack 2. Tubes

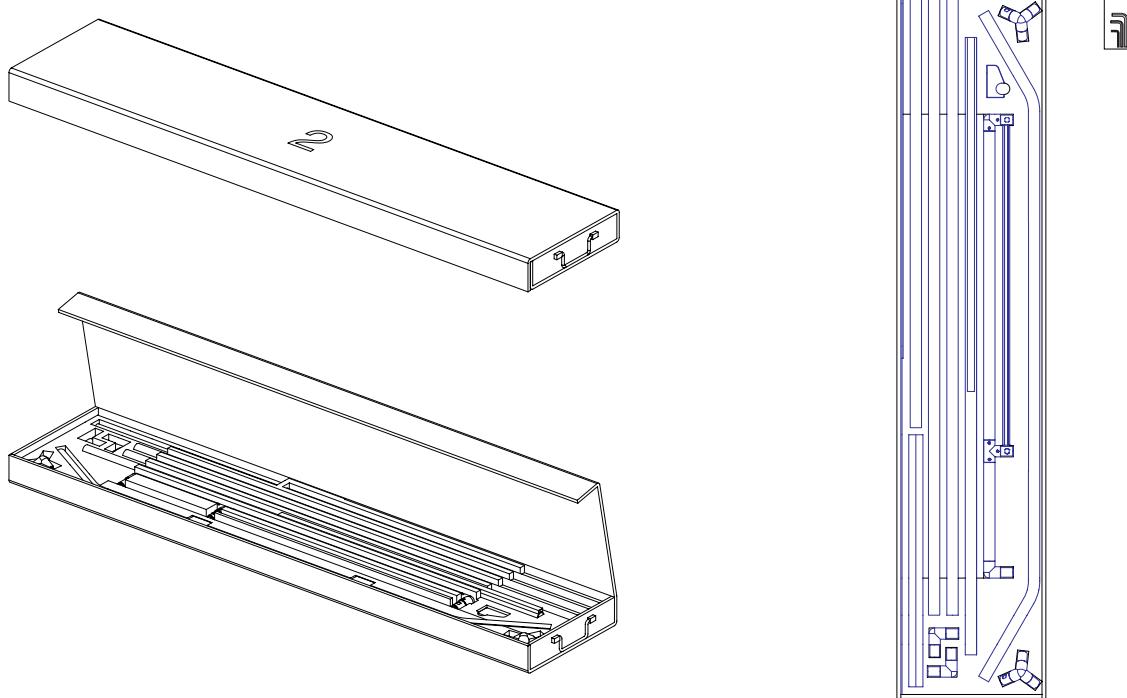

## 5.



. Insert tubes N01.  
⚠ Come to a stop.

N01

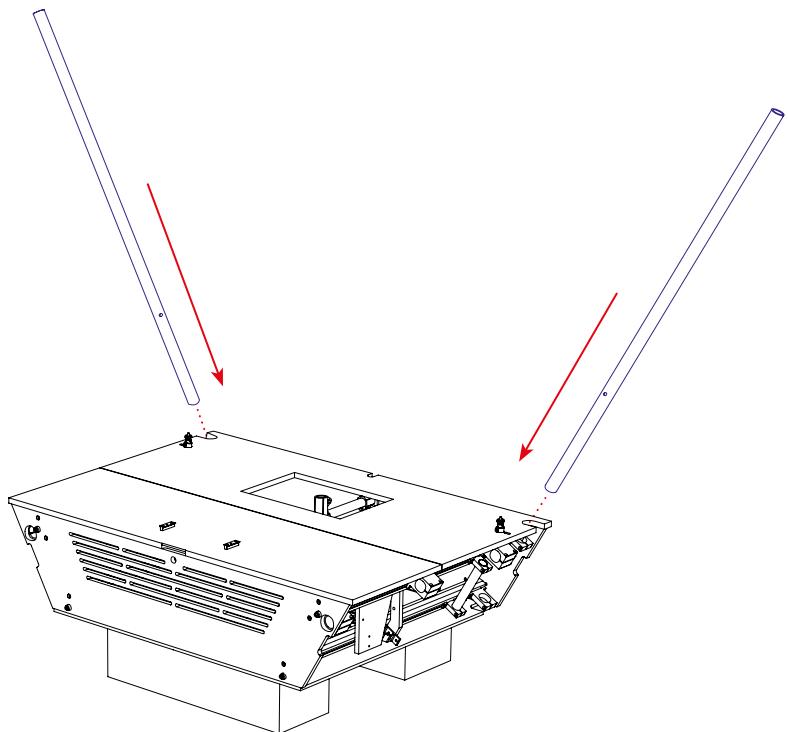




## 6.

. Tighten 2x with tool (BTR 05) on the right and left side.

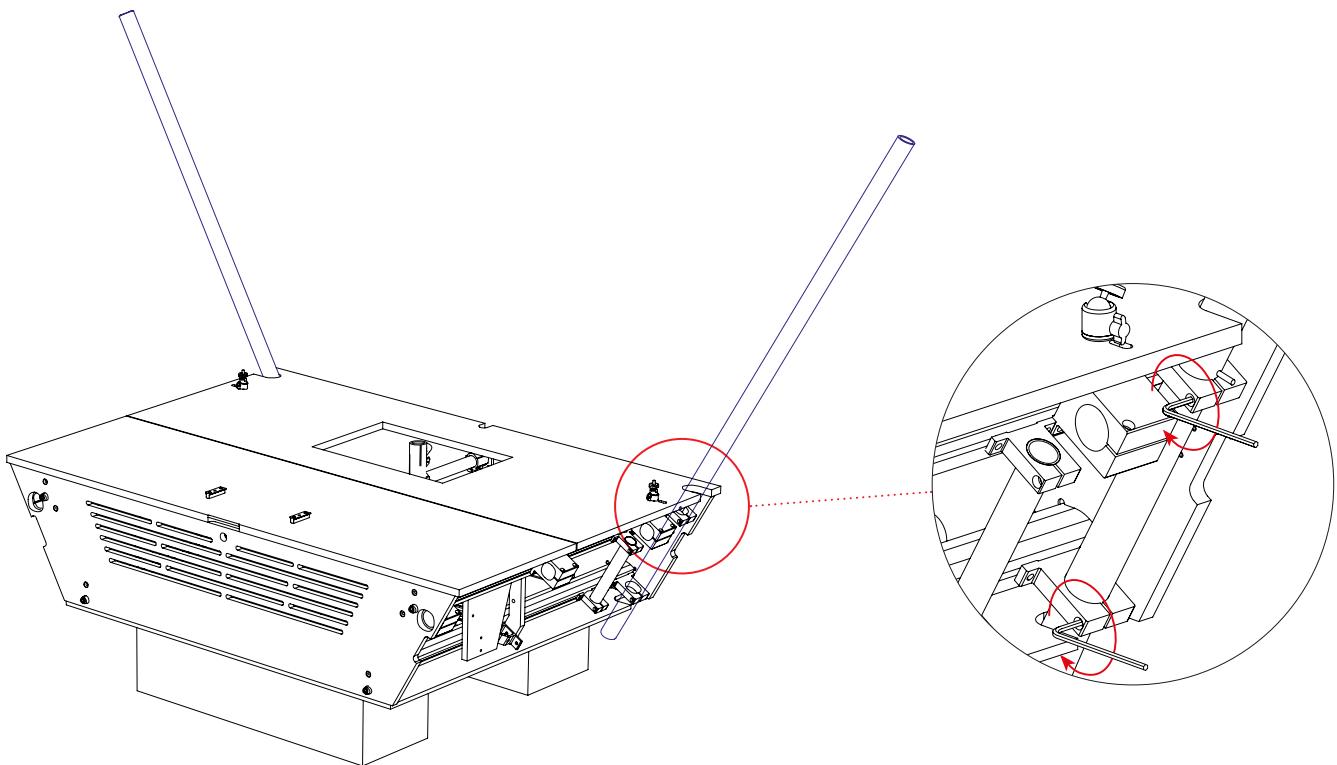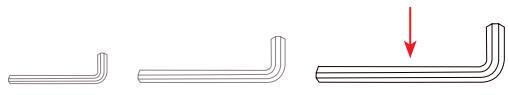

7.

. Insert N12 2x and N07 2x. Then, tighten.

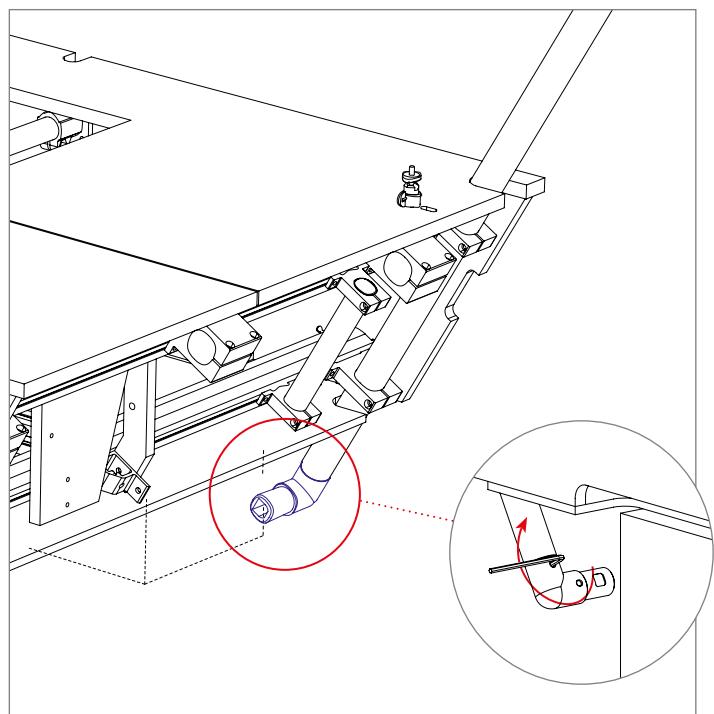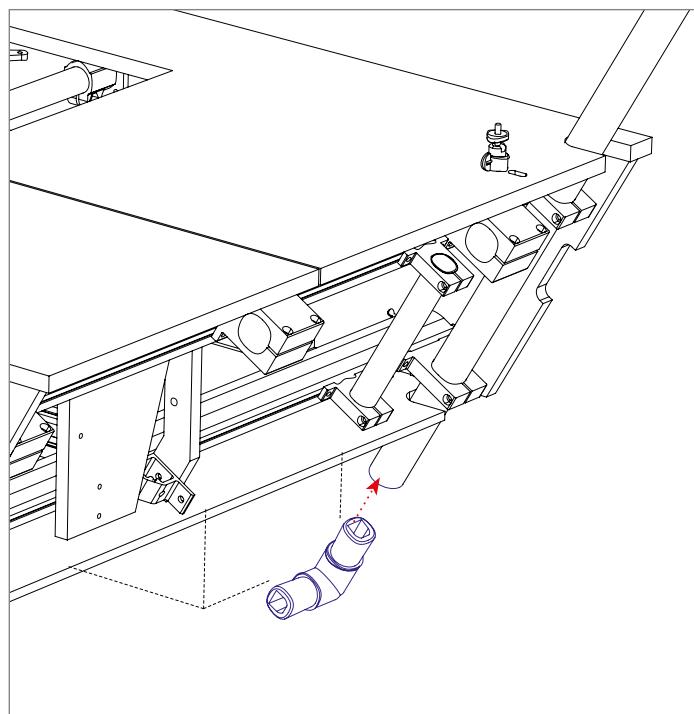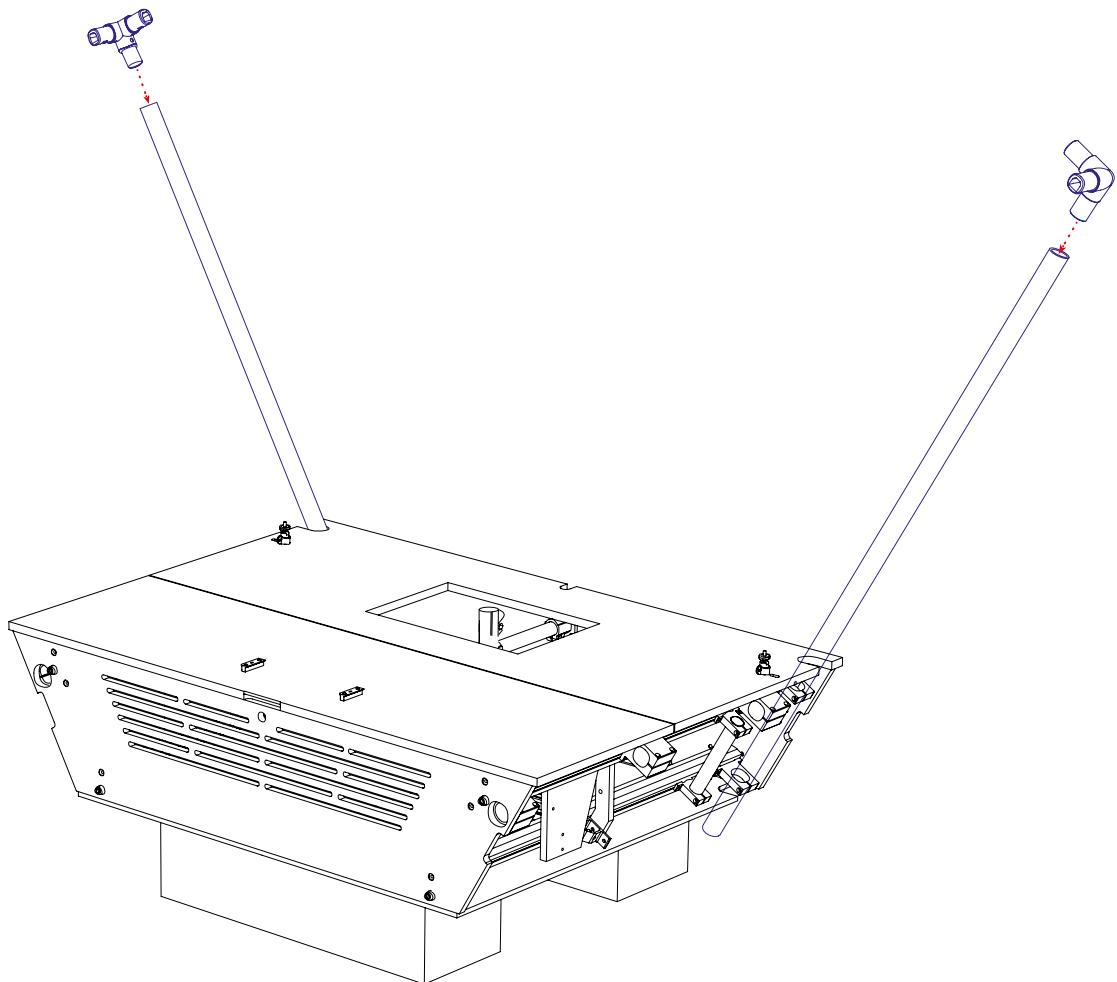


**8.**

. Insert tubes N05 and N17.  
⚠ Come to a stop.



N05


N17

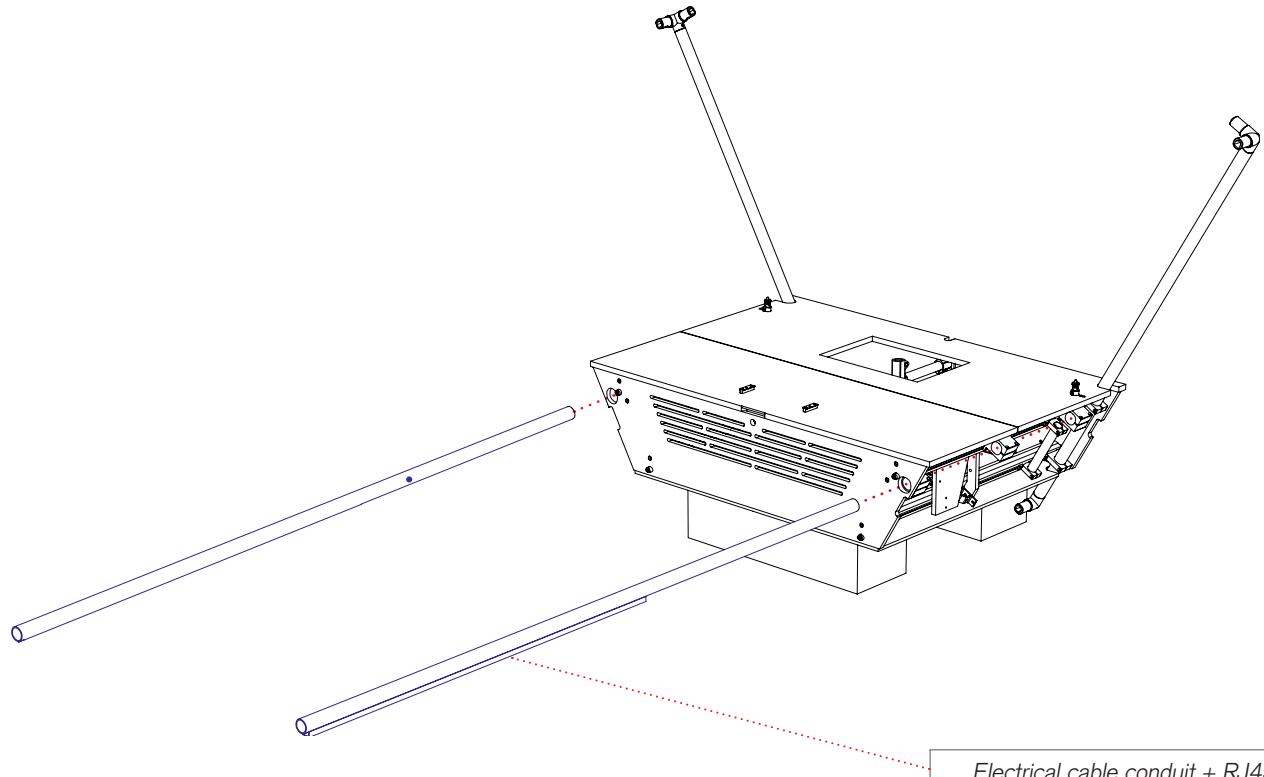

Electrical cable conduit + RJ45


**9.**

. Tighten 6x with tool (BTR 05) on the right and left side.

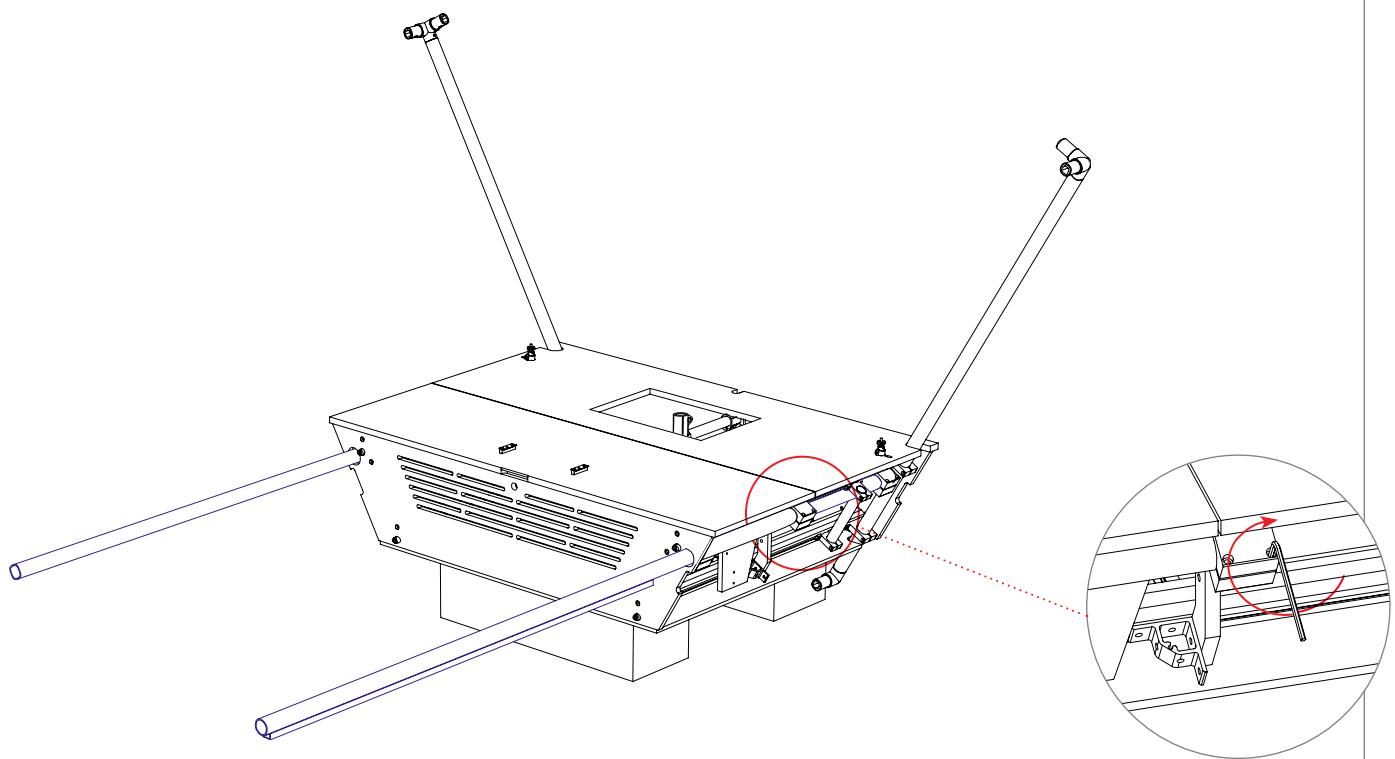




**10.**

- . Insert tubes N04 2x in N15.
- . Repeat for the right side.



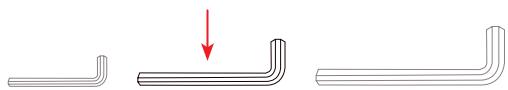


N04

N15

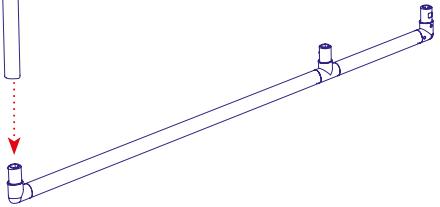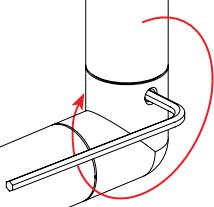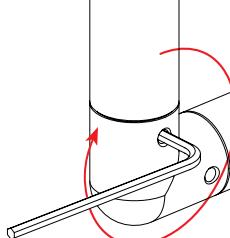

**11.**

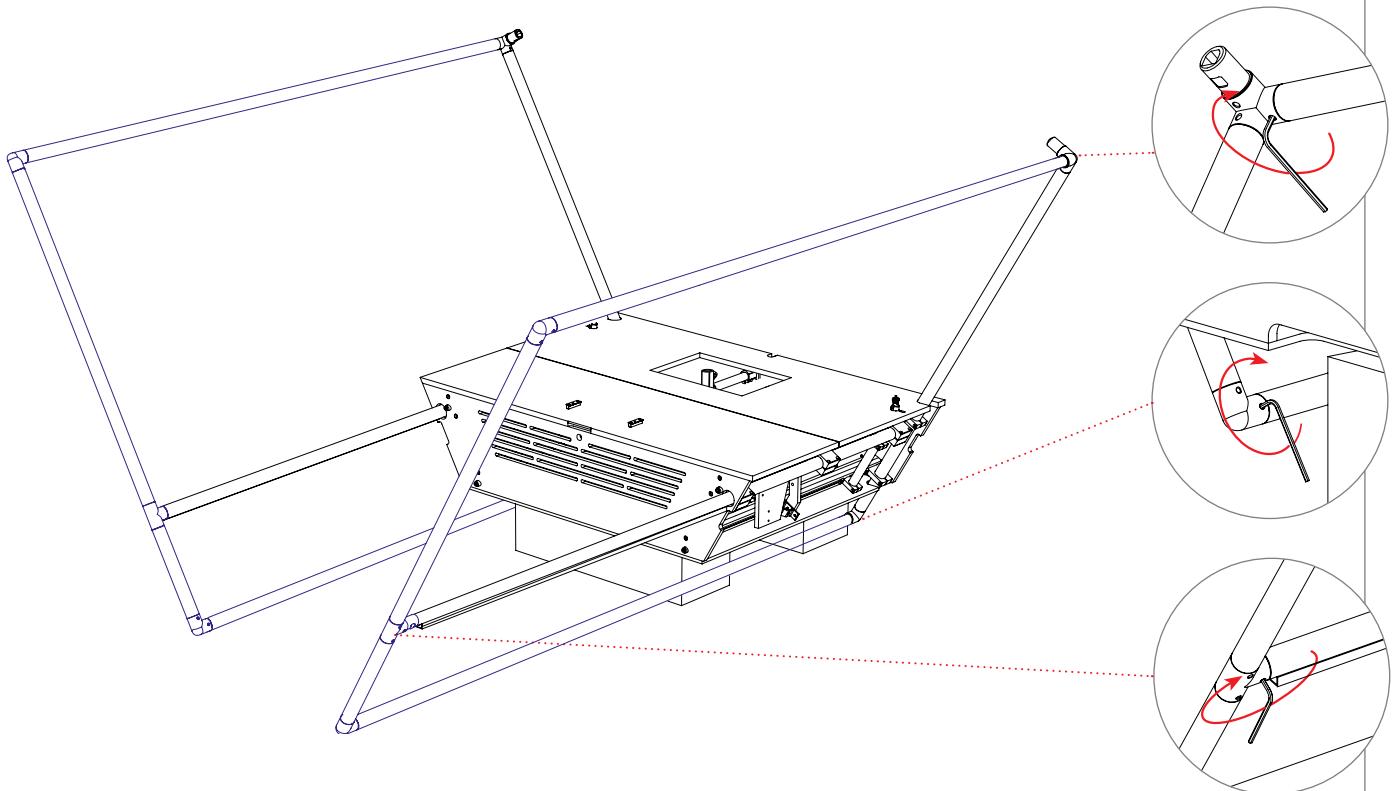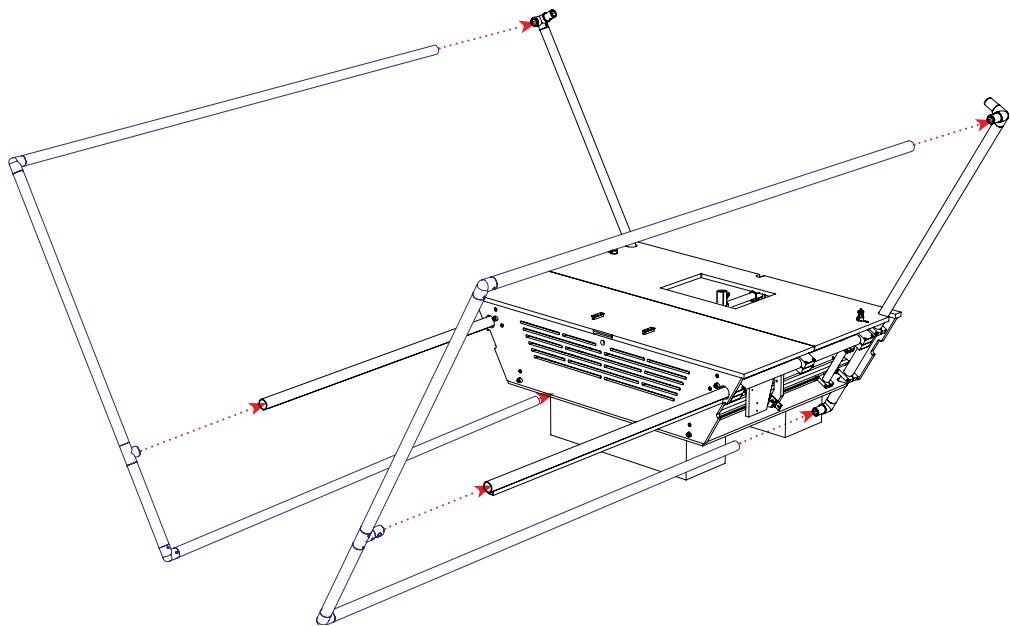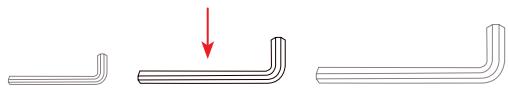


Tightening › Make sure to tighten all of the screws of the structure  
Connections › Screws facing inwards


# 12.

. Insert and tighten N02.  
⚠ Slightly force each side to insertion.


N02

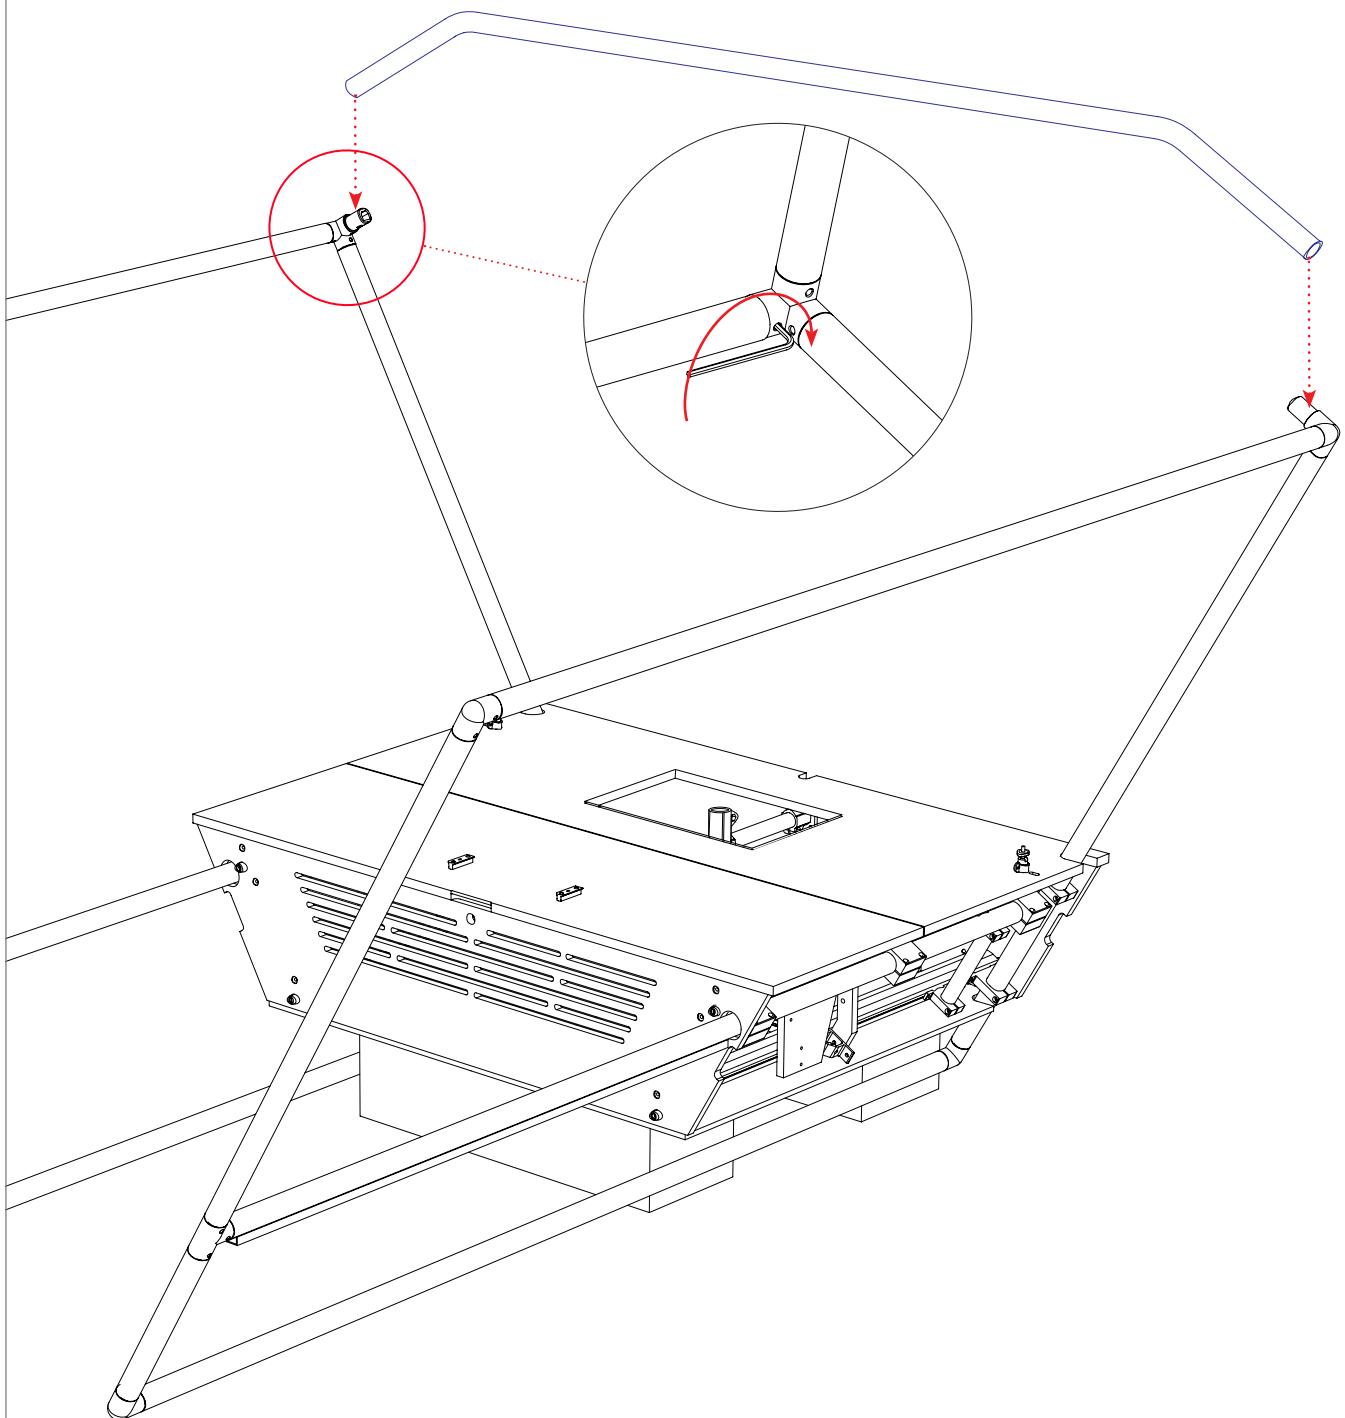



# 13.

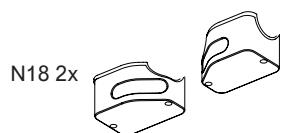

## . Mount Cable Conduit.

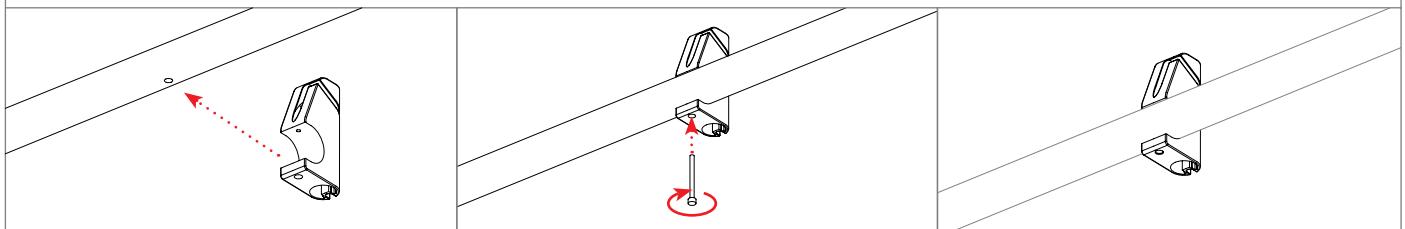

## . Mount Retractors.

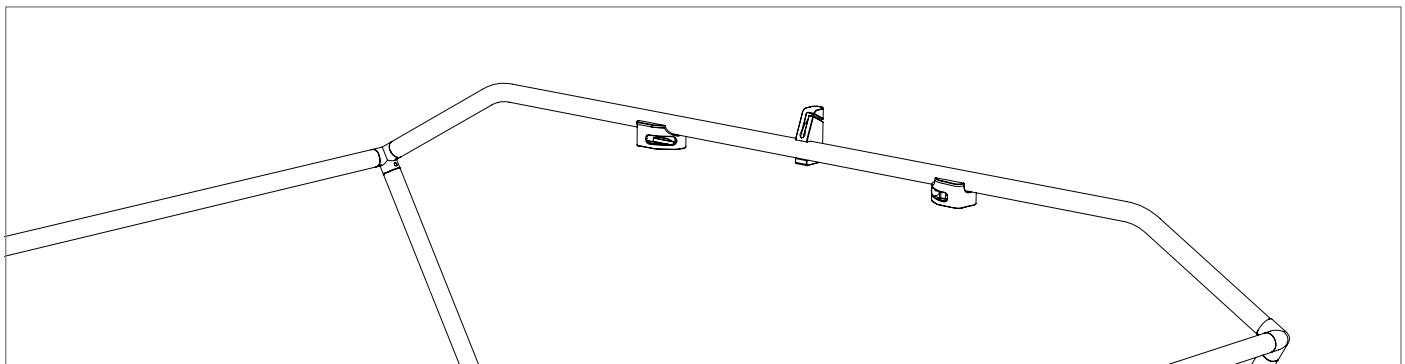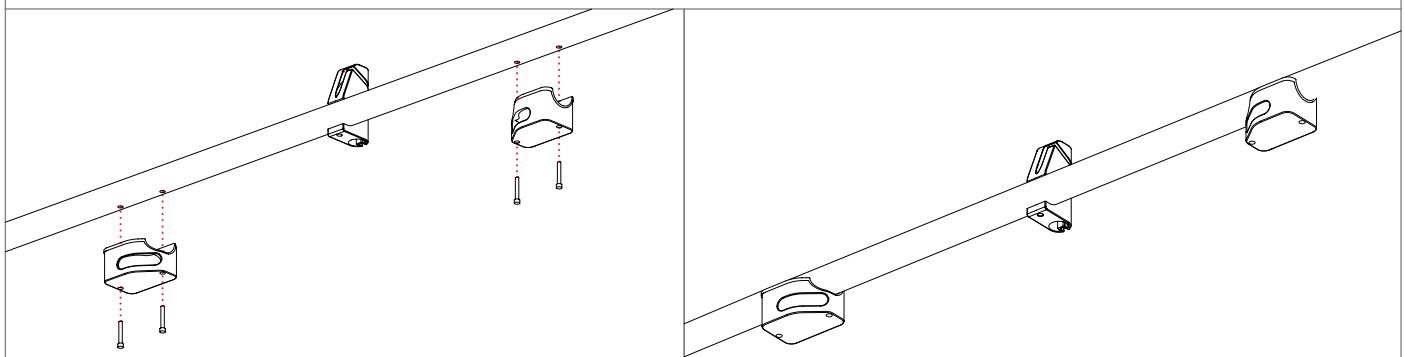




# 14.



- . Remove screws from ITAS N06 and N07.
- . Add Flat Bar N14 to ITAS N06.
- . Add Flat Bar N16 to ITAS N07.

- . Lock ITAS with tool. (BTR 03)

**⚠ If after assembly, the structure seems unbalanced, try loosening ITAS N06 and N12.**

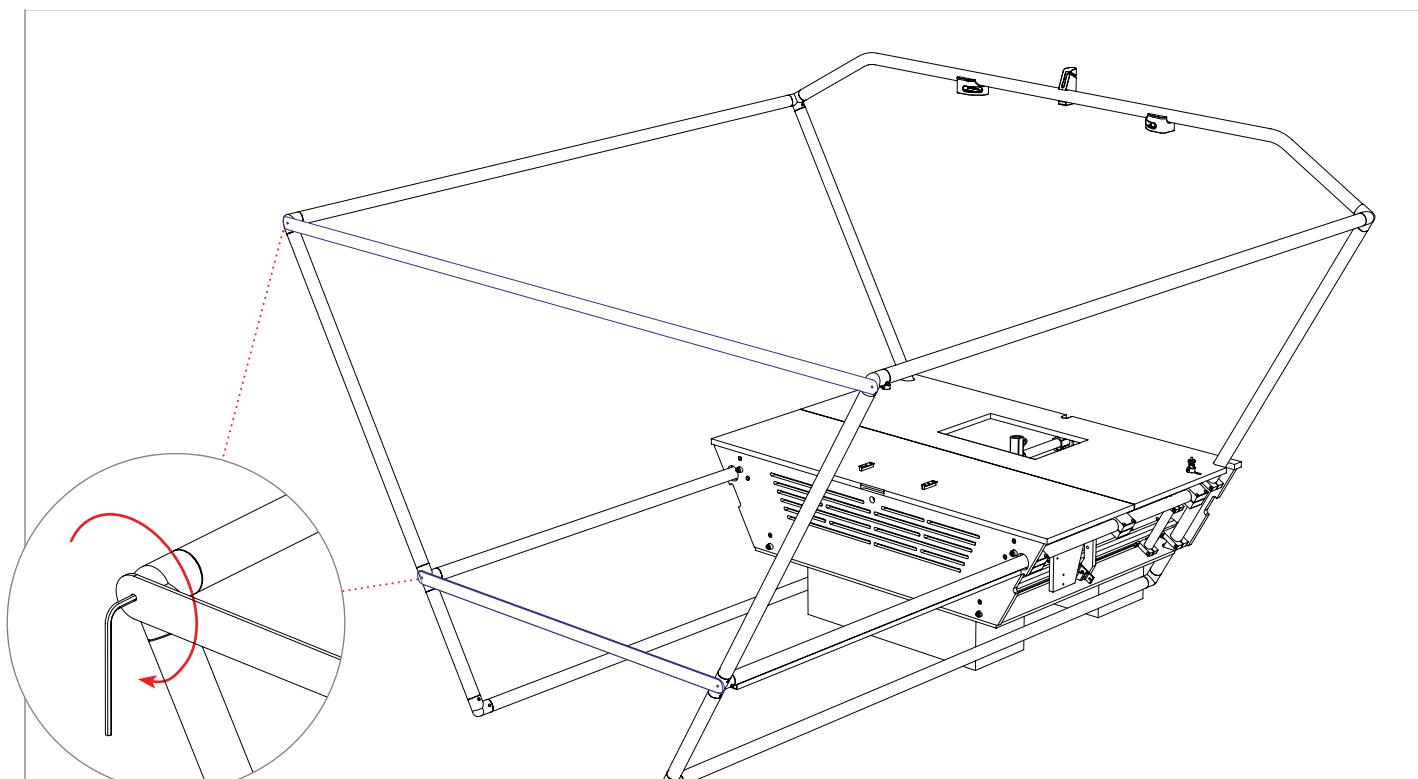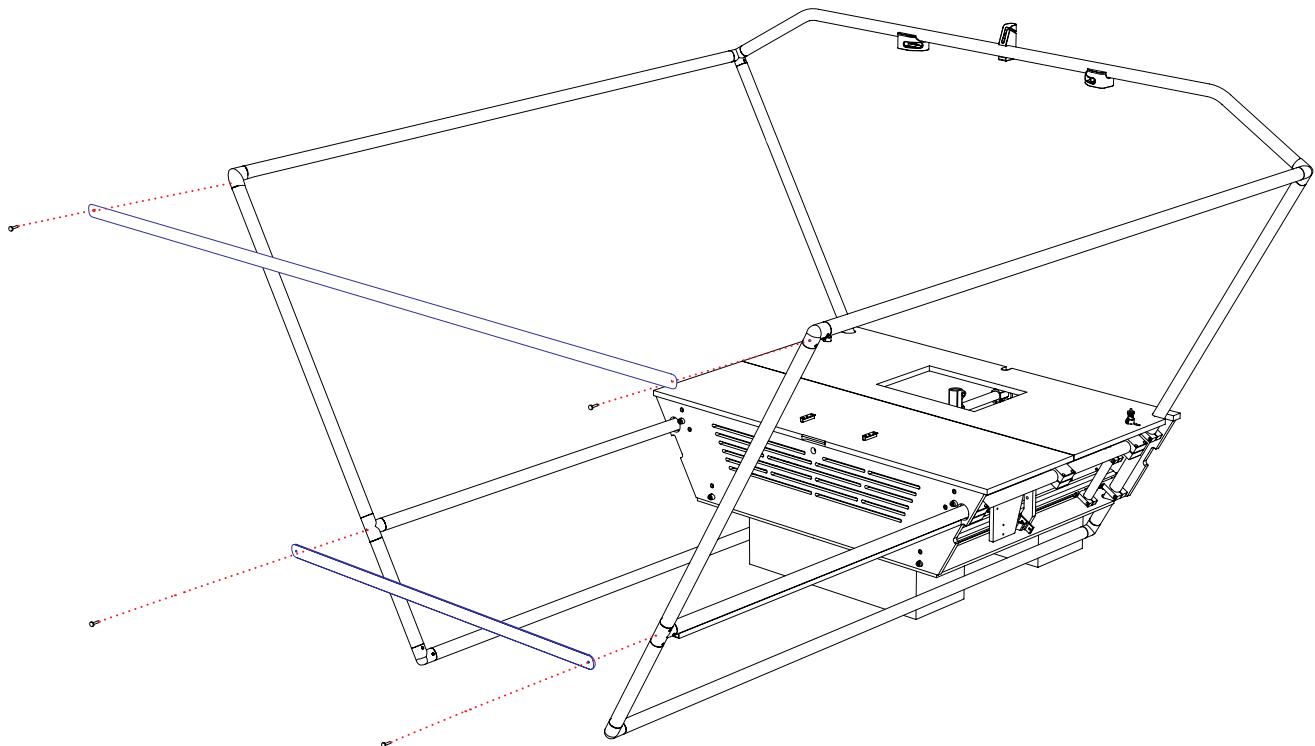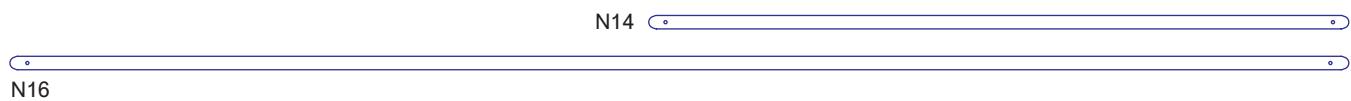





**⚠ Warning, heavy and dangerous! Do not stay under either Flat Bars!**

# 15.

- . Lift with the red bars on the illustration.
- . Tip the entire structure by balancing the structure's weight on ITAS N07.




**⚠ Mounting bars. Do not pull from the front of the Box.**

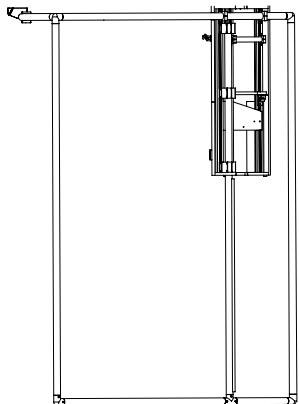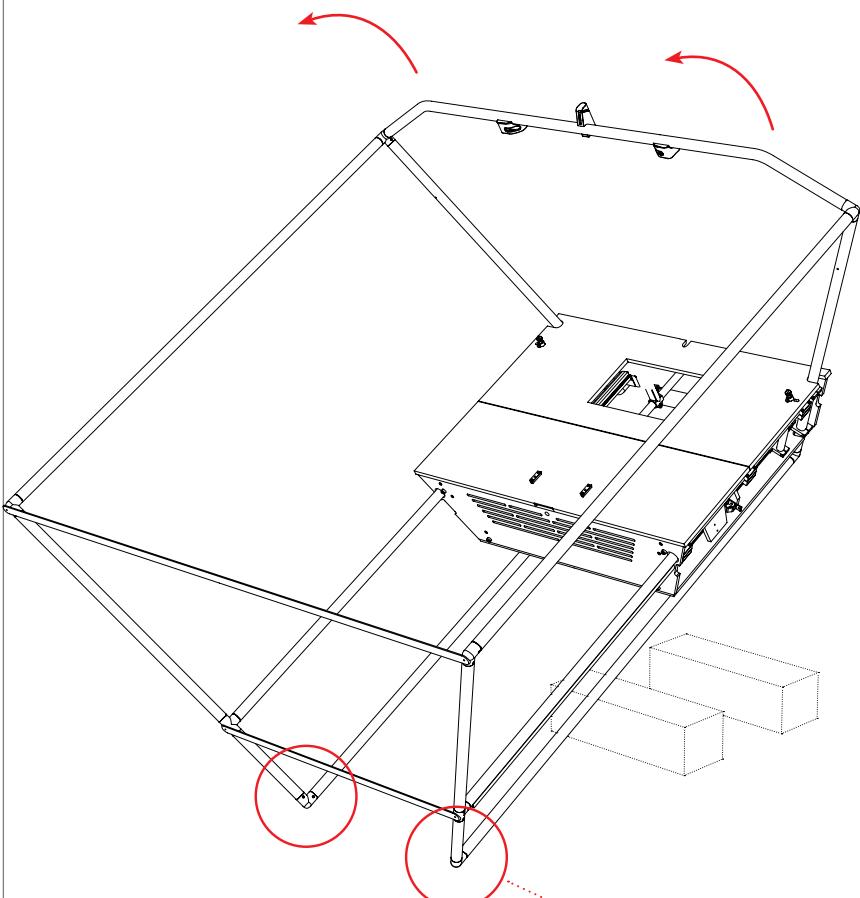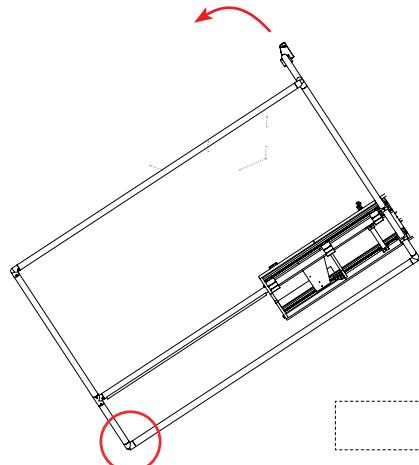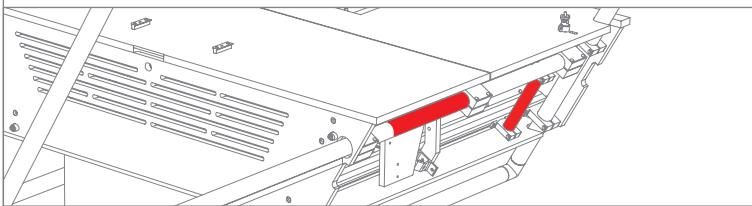

*Tipping points*



- . Pull out the cover of the Cable Conduit.
- ⚠ Put it back after installation of the Cable Conduit.**
- . Install the Cable Conduit.

N09

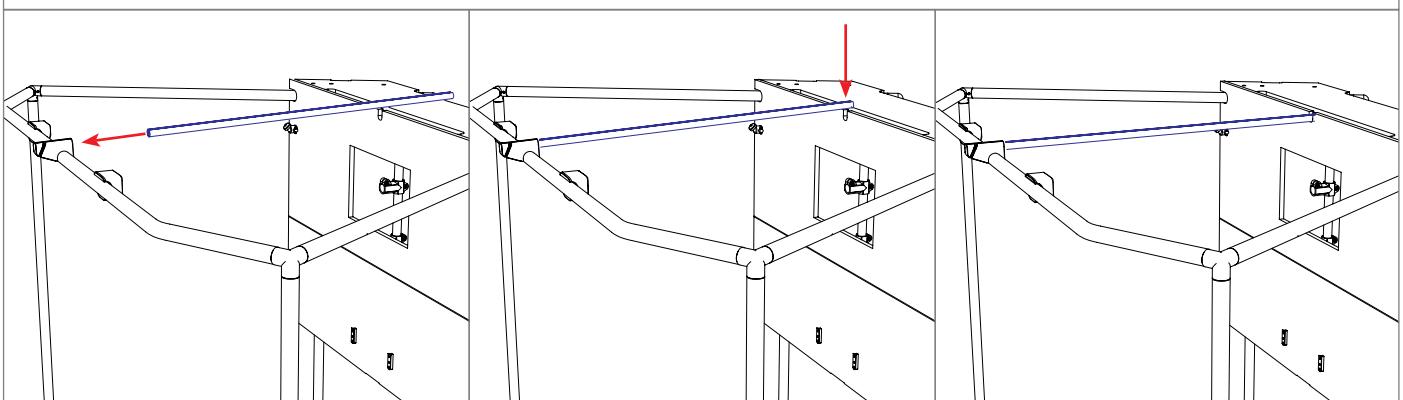



# 16.

## Pack 3. Flooring

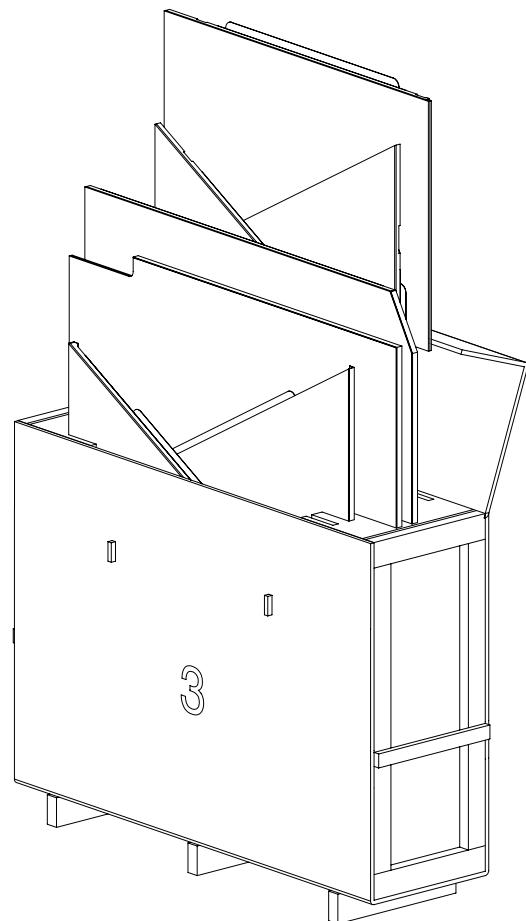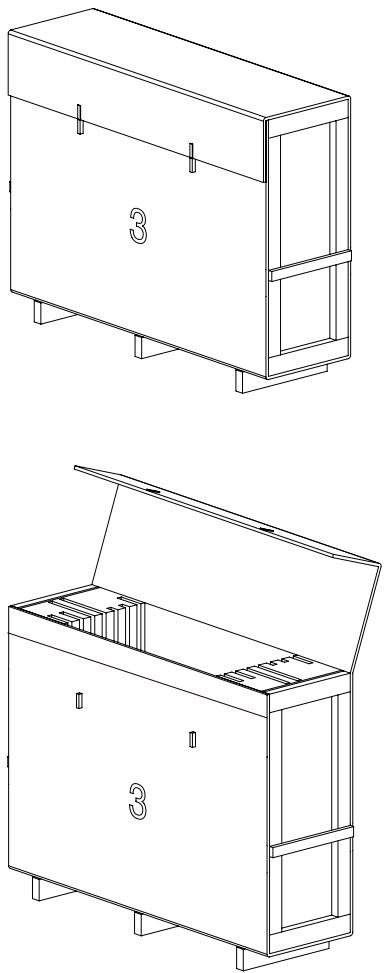


# 16.

## Pack 3. Flooring

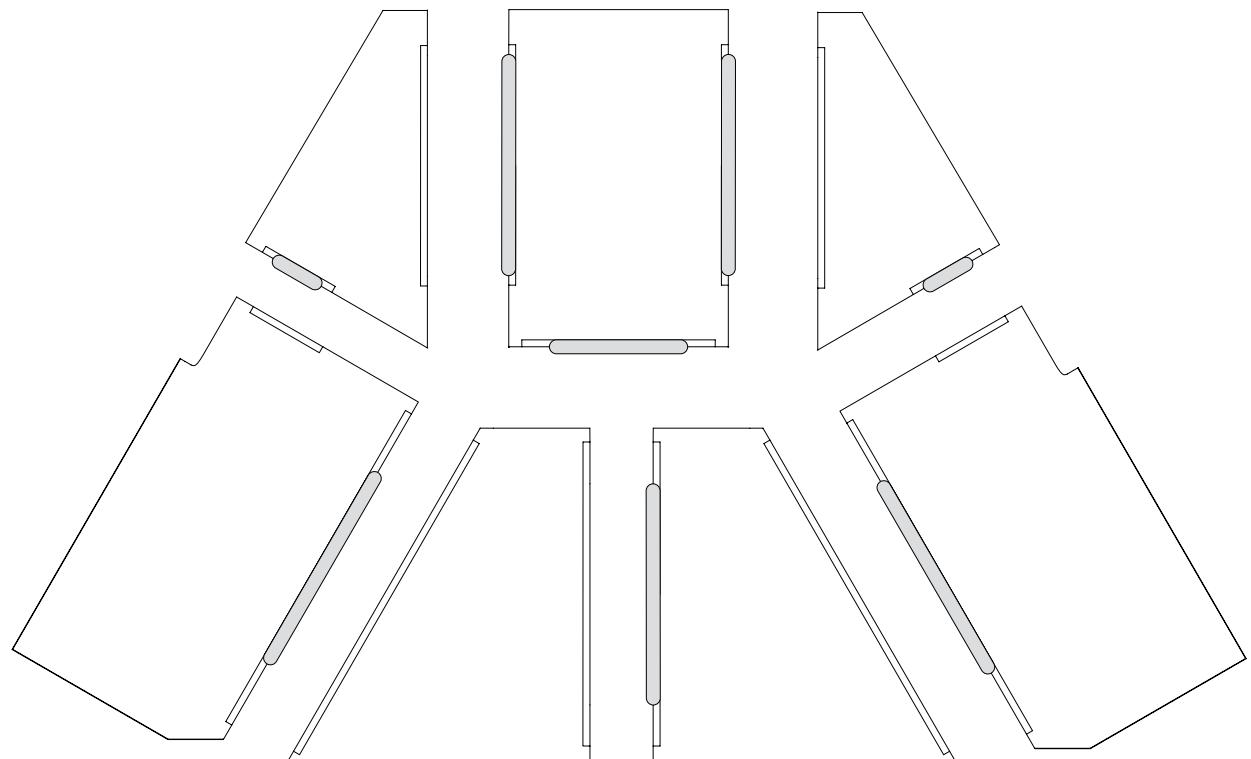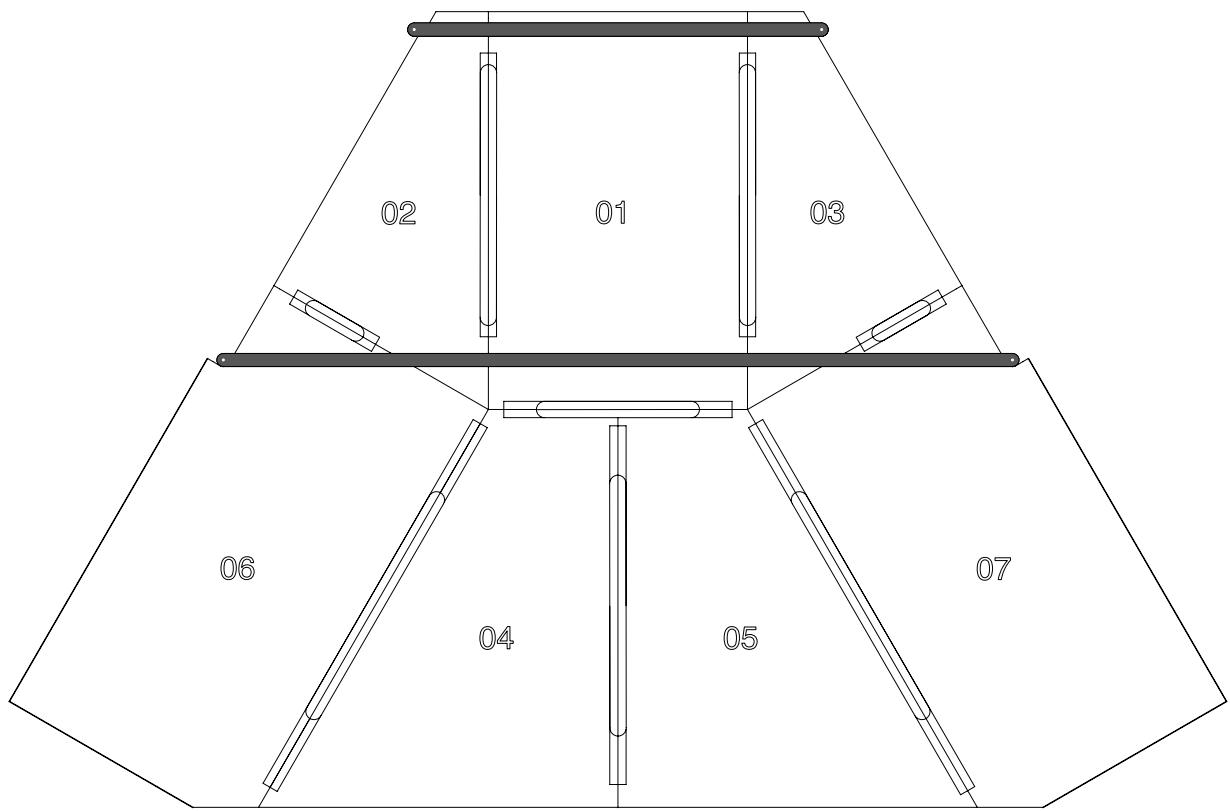


**17.**


- . Take the middle panel (01.), turn it over and position the velcro strips on its sides.
- . Lay the panel on the ground by positioning the Flat Bar into the recess and velcro.
- . Repeat this step for panels (02. / 03.)

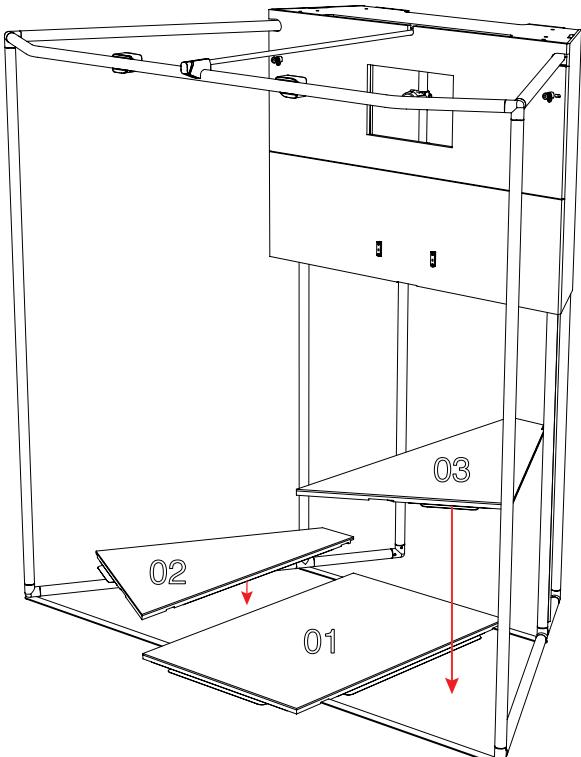

Mounting process

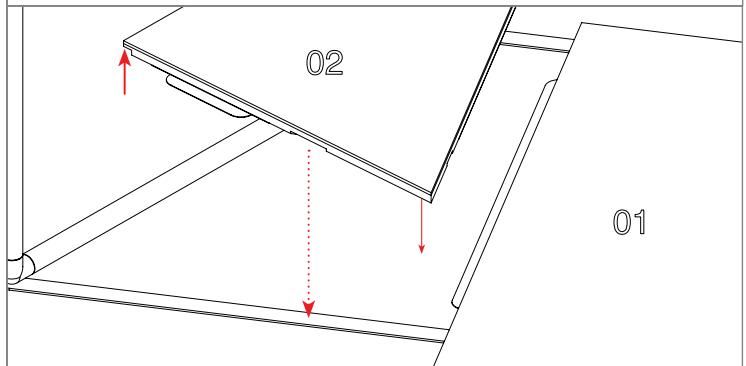


- . Take the middle panels (04. / 05.), turn them over and position the velcro strips on the sides.
- . Lay the panels on the ground and position them on the velcro.
- . Repeat this step for panels (06. / 07.) by positioning the Flat Bar into the recess and velcro.

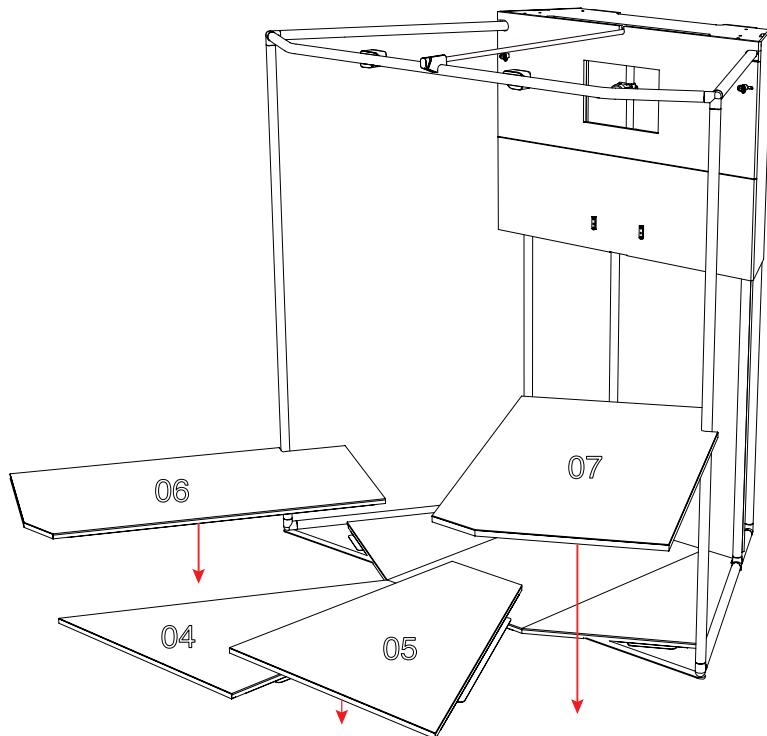

Congrats! Now comes the easy part!

# VR TECHNOLOGY

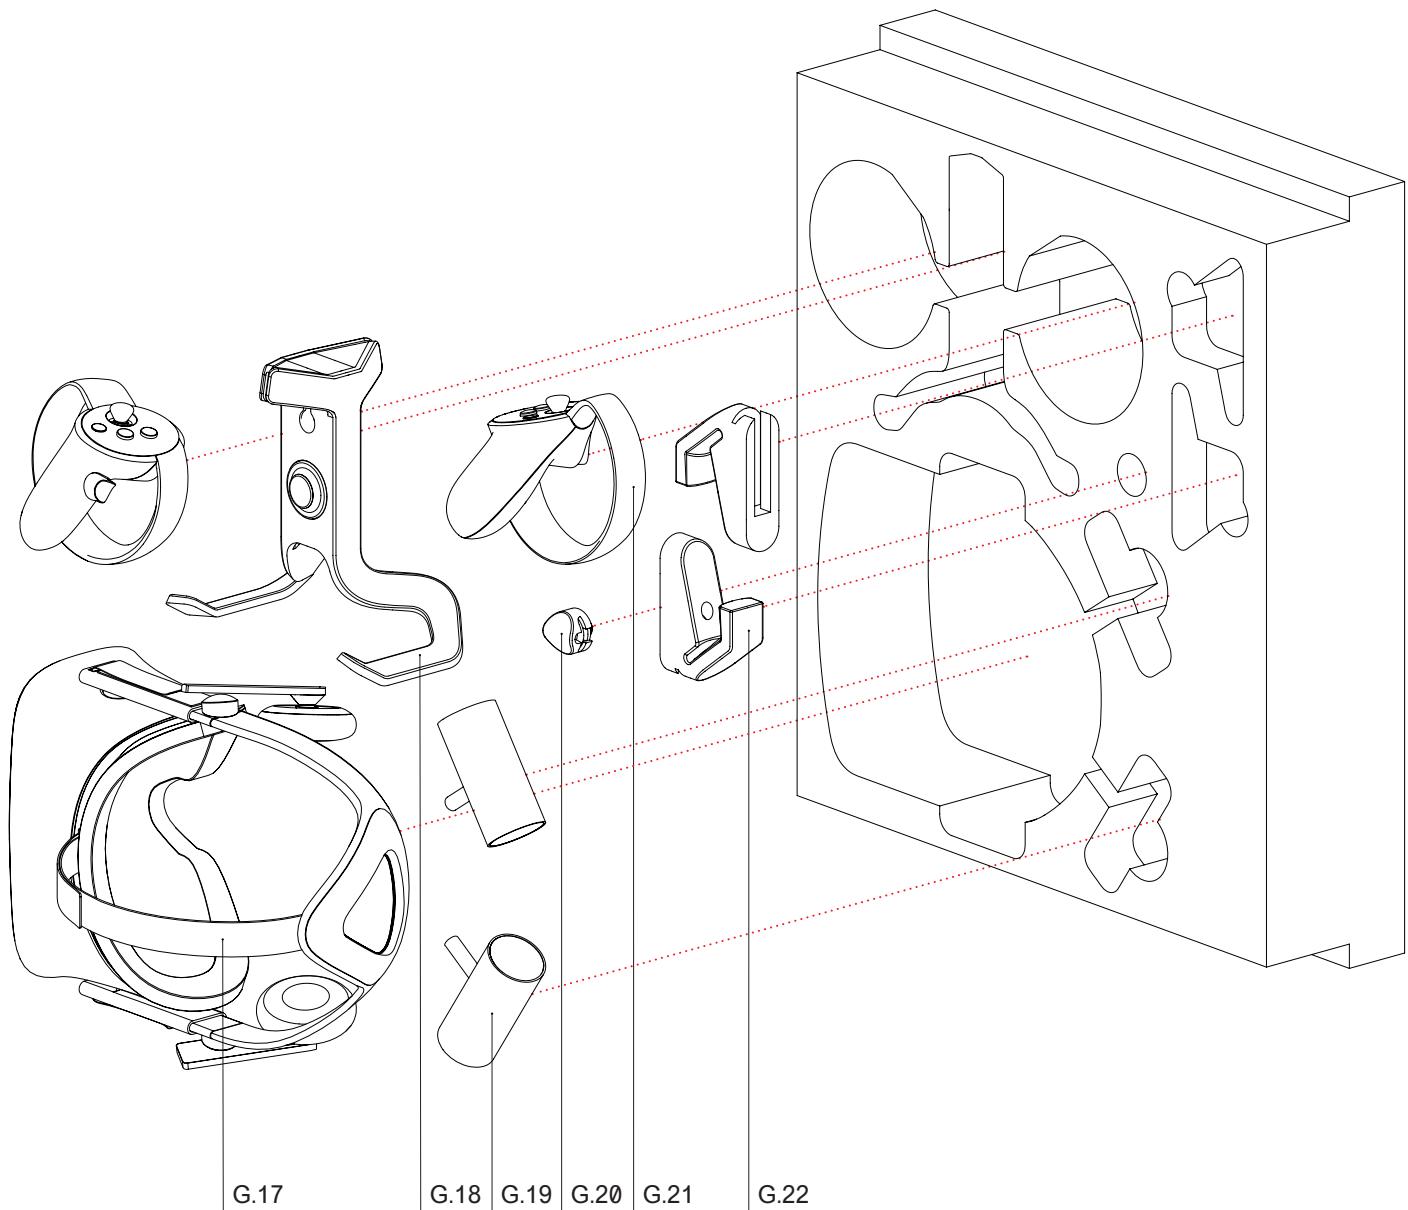


G.17	VR Headset	1x
G.18	VR Headset Mount	2x
G.19	Sensor	2x
G.20	VR Headset Cable Mount	1x
G.21	VR Controller	1x
G.22	VR Controller Mount	1x

# 18.



## . Box Panel Gate

. Grab the keys by cutting the plastic cable tie.

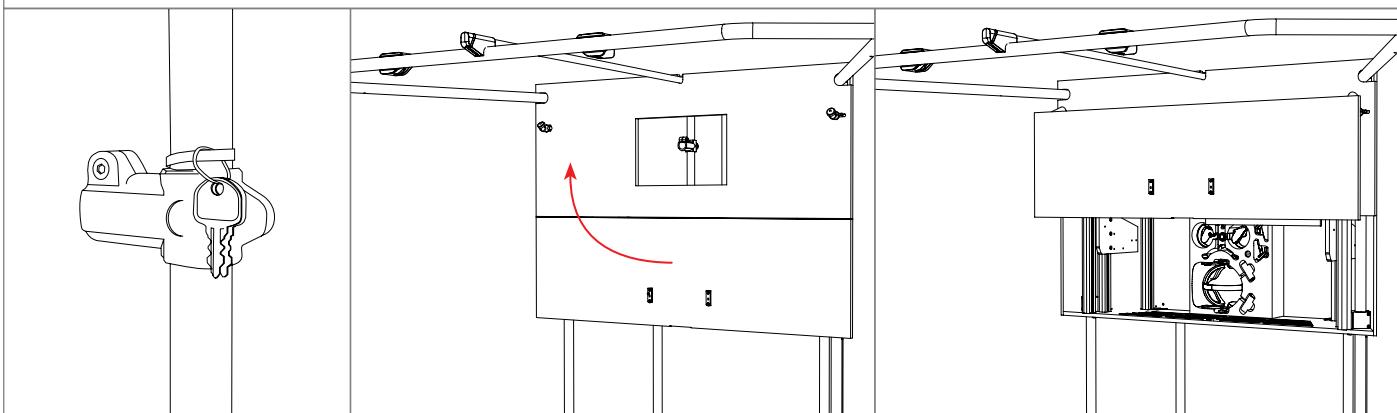



# 19.

## . Installing VR Headset Mount

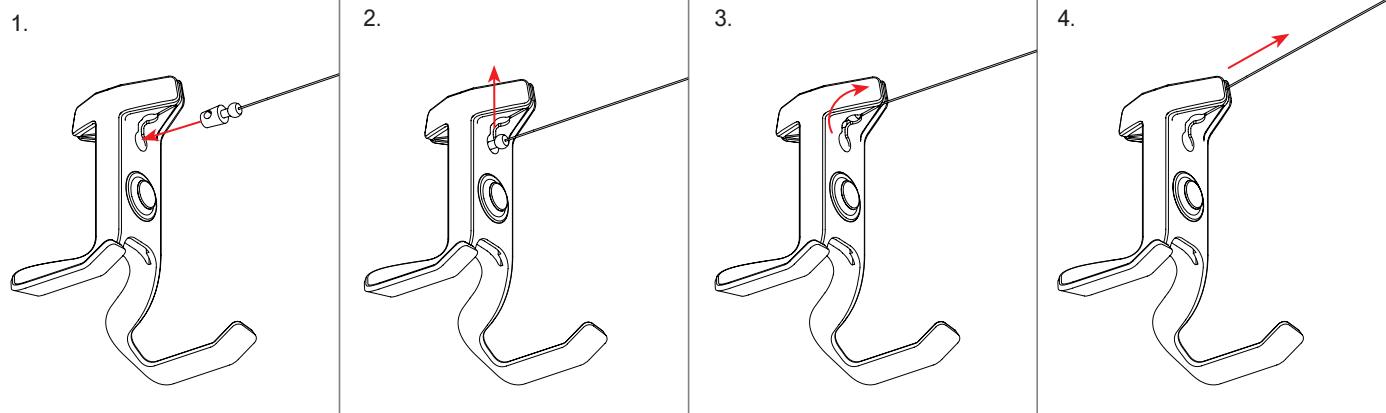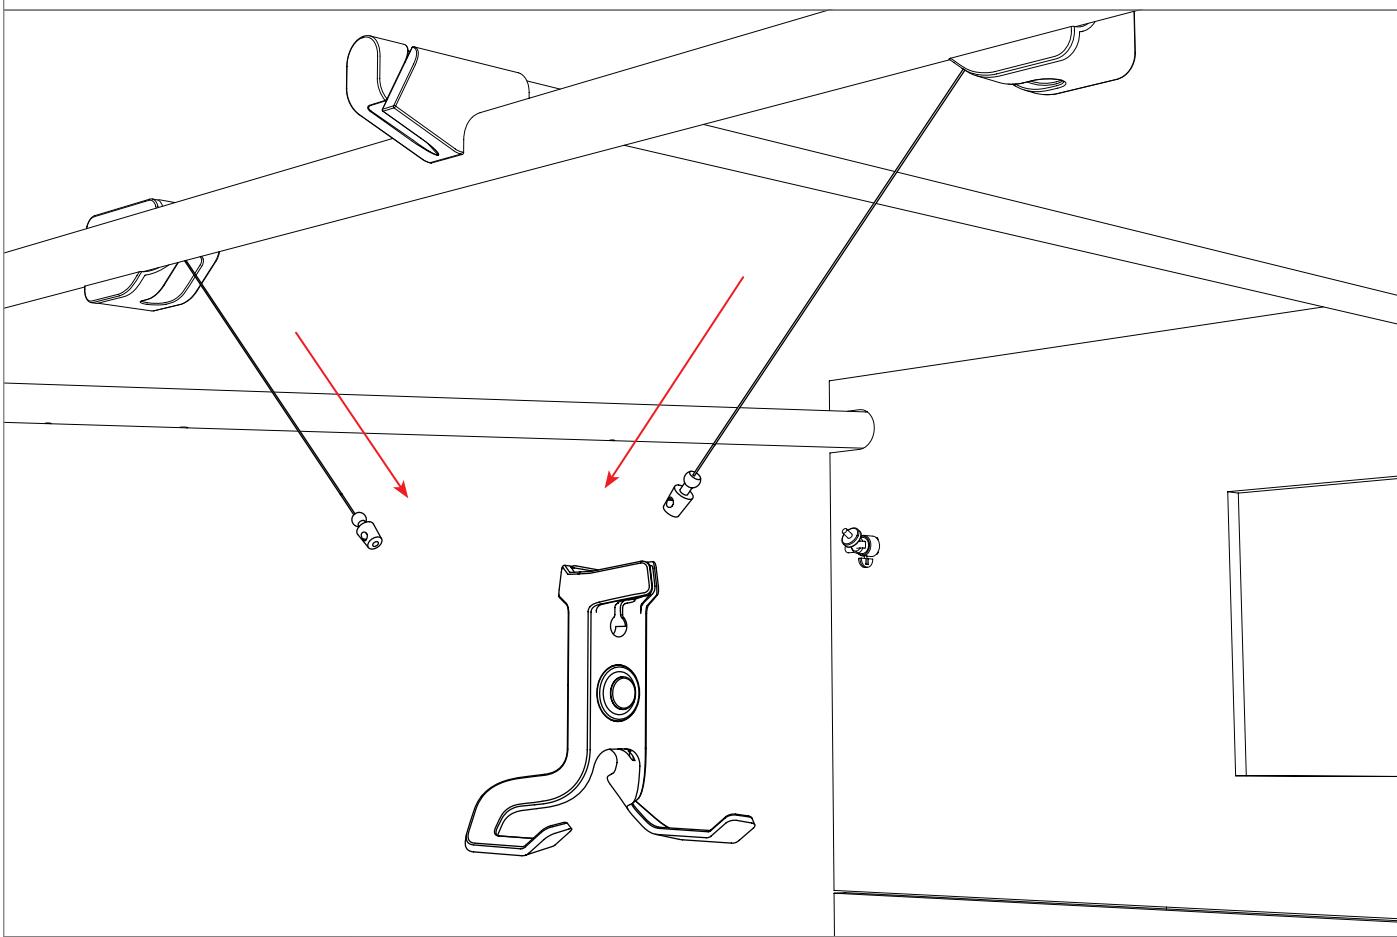

## 20.


. Installing VR Headset Cable Mount

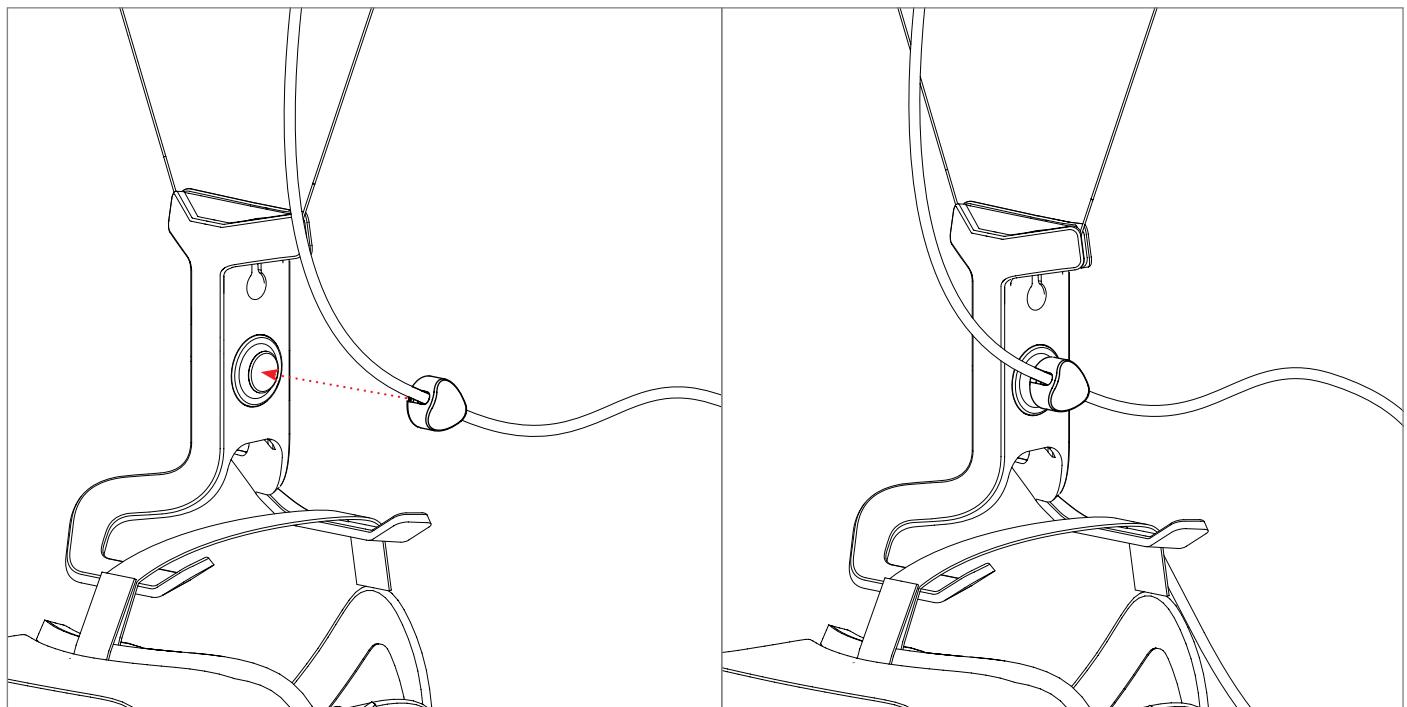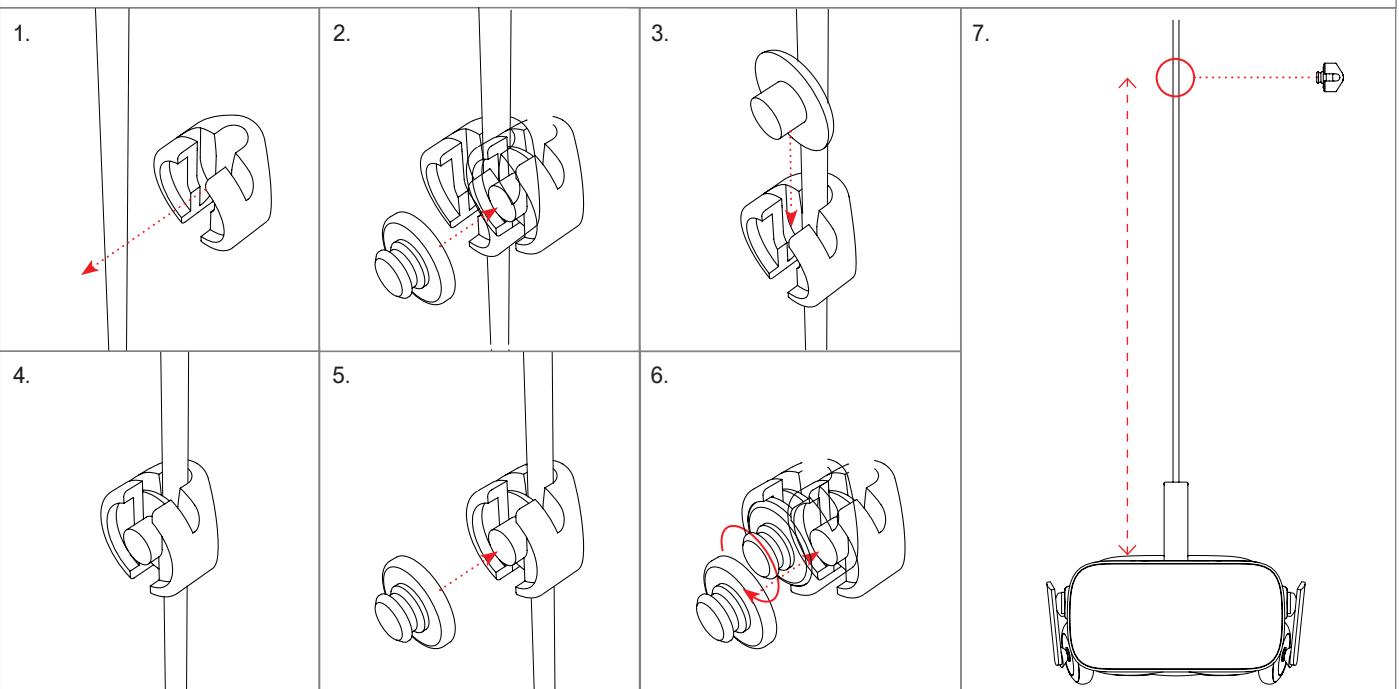

## 21.






Mounting Sensor

. Lock with BTR tool or by hand

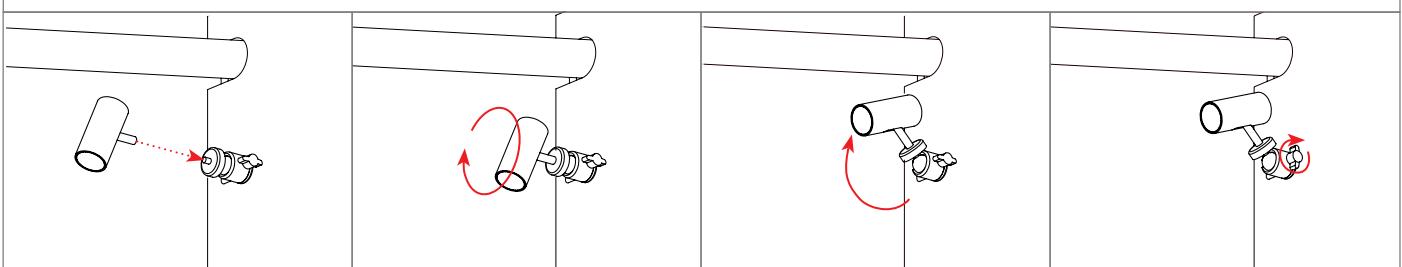

## 22.

. Installing VR Controller mount.

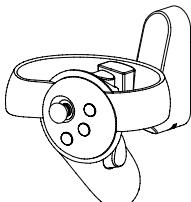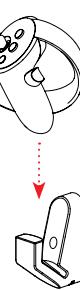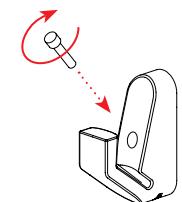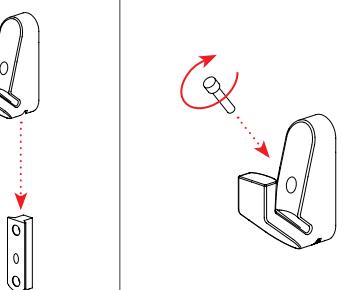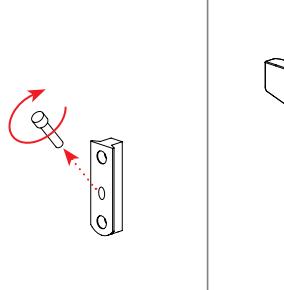


## 23.


. TV Installation




1. Remove TV from **Pack 1**.

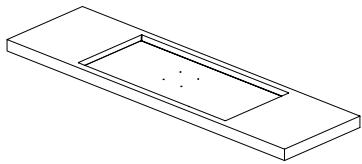


2.

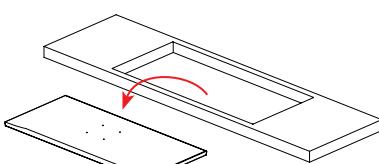


3. Screw in VESA with tool.  
(BTR 08)

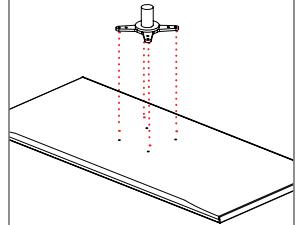


4.

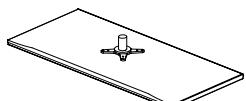


5.

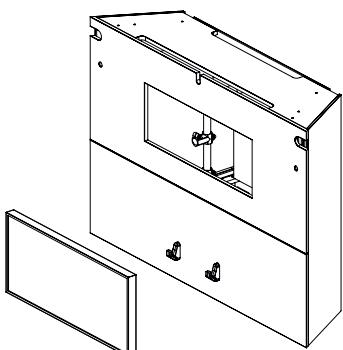

6. Insert VESA mount into Box QUAD.  
Lock QUAD with tool. (BTR 05)


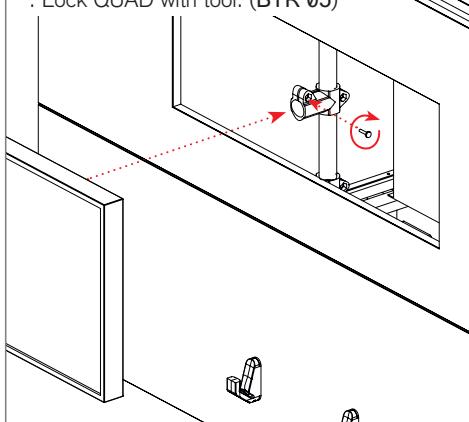


7.

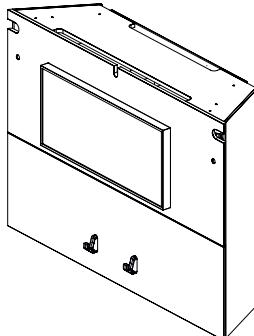


## 24.

. Place the Side Panel onto the sides of the Box

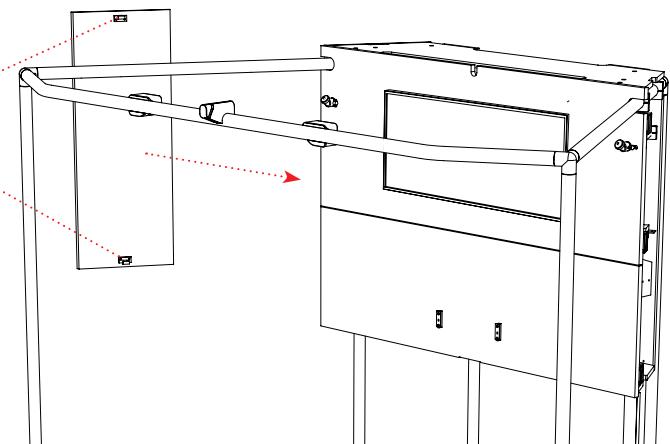
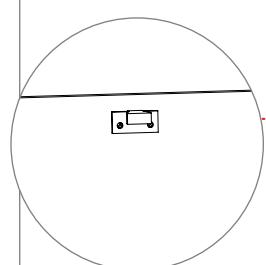


# 25.


## . Connections

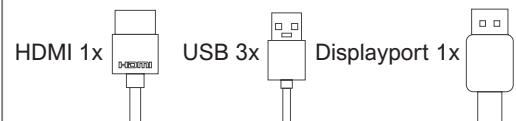



. Headset

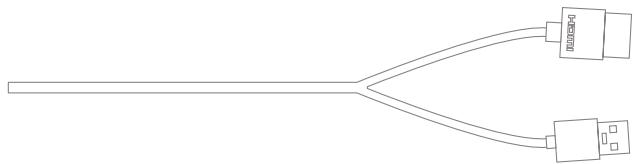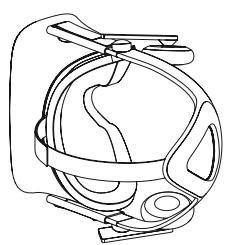

. Sensors

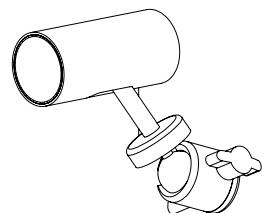

. Screen

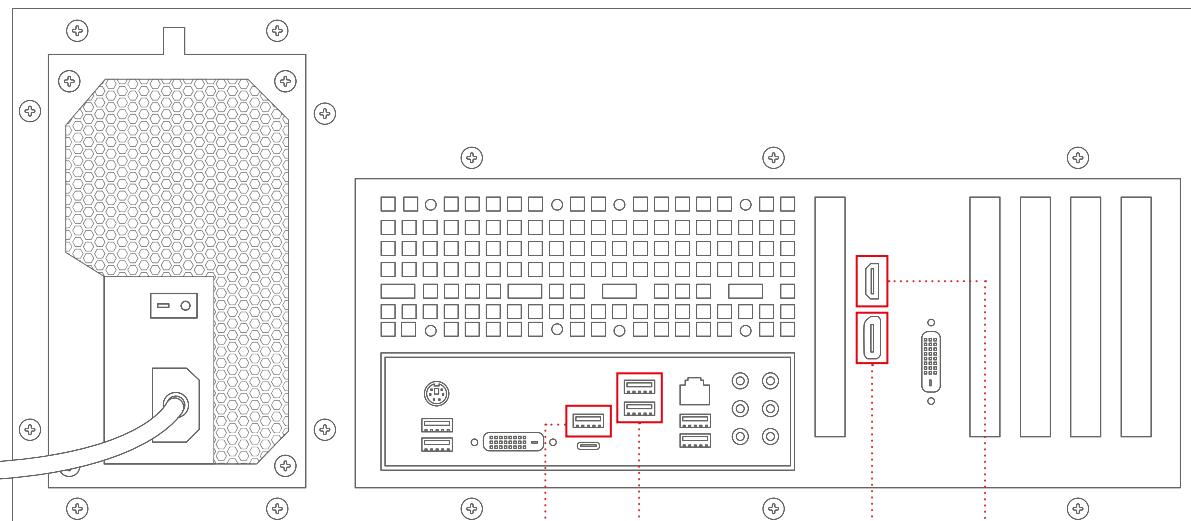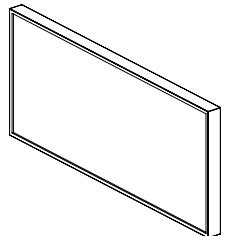


USB cables  
for the headset

USB cables  
for the sensors

HDMI  
for the headset


Displayport  
for the screen

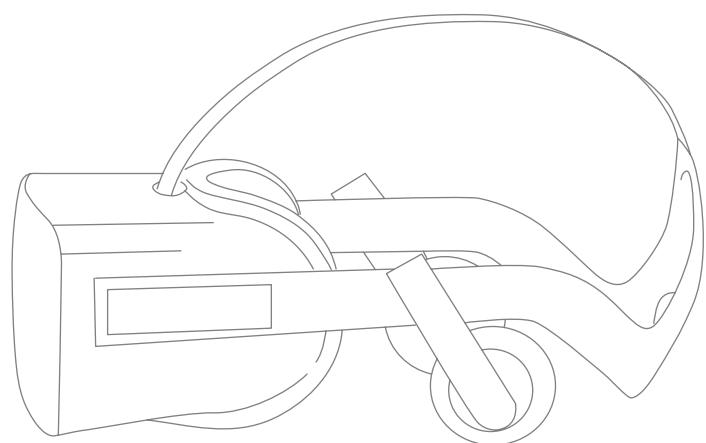

You're done!  
Now's the time to test it out.


## Optional banner

If you wish to include one or a few banners to the structure, the dimensions below are to be given to your printer. Dimensions are in millimeters.

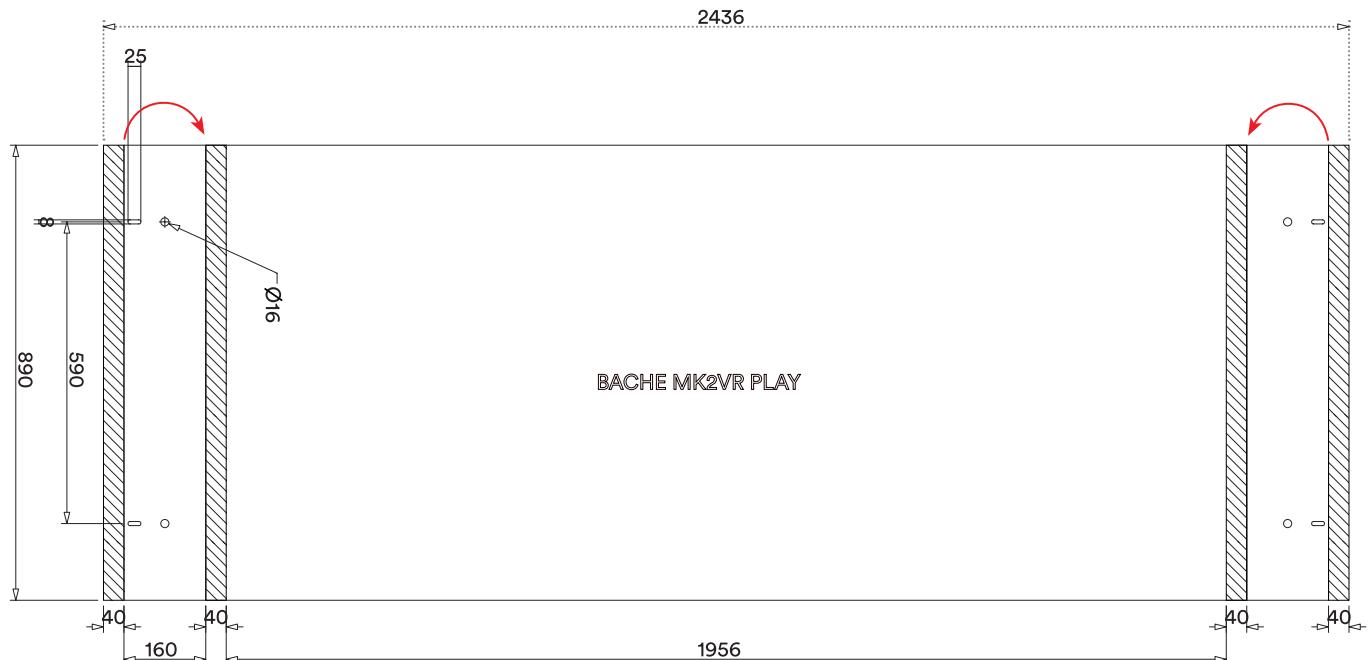


Gluing Surface

1.

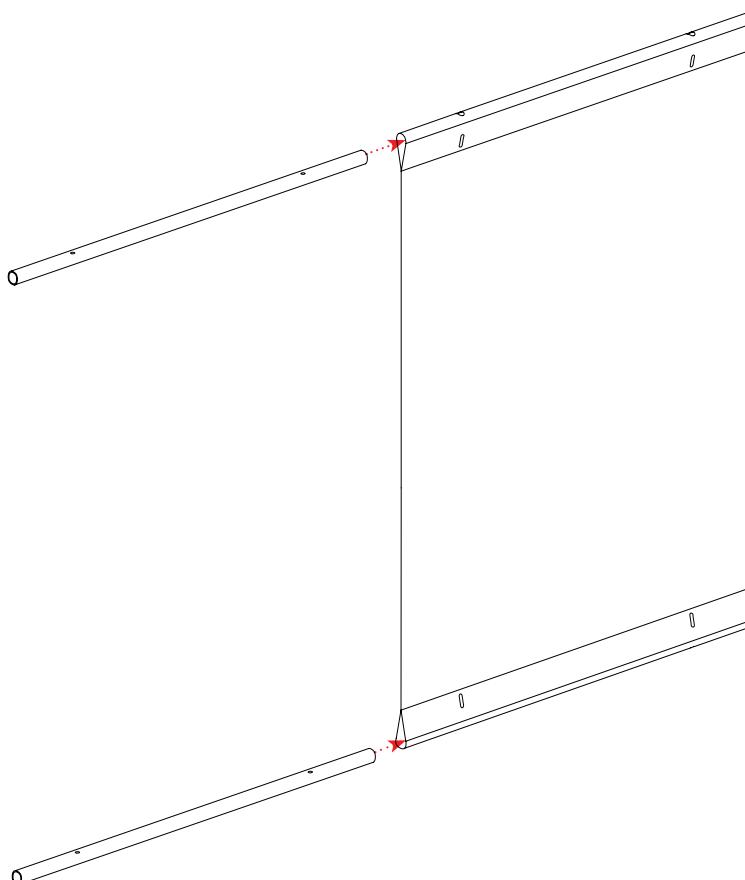


2.

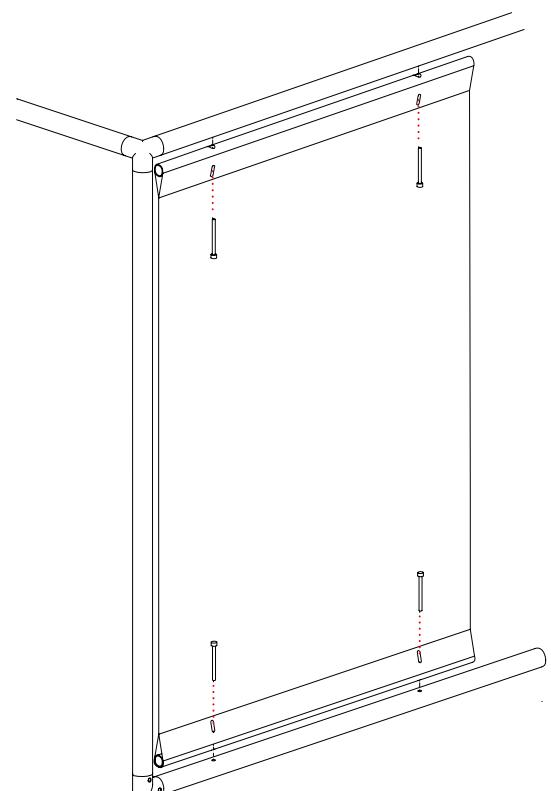


# Disposition

## Final Dimensions

Front view

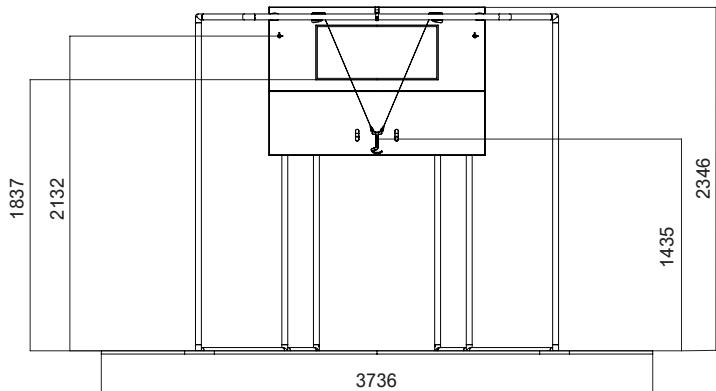


Top view

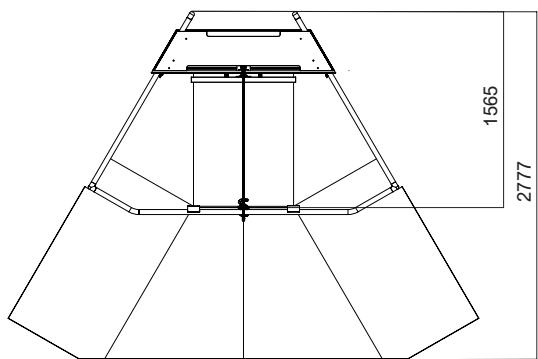


## Modular disposition options


1x

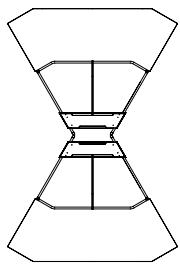




6x

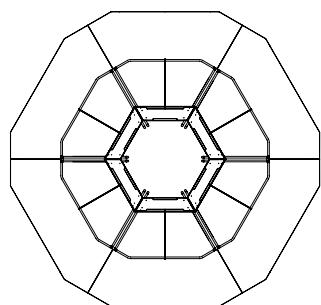

9x

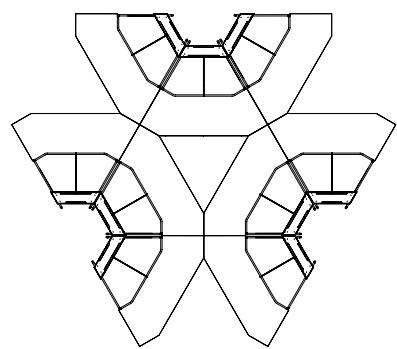

3x

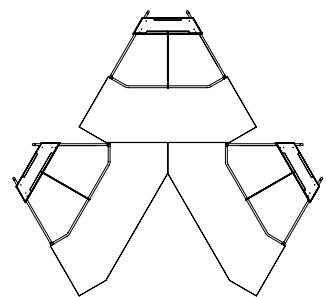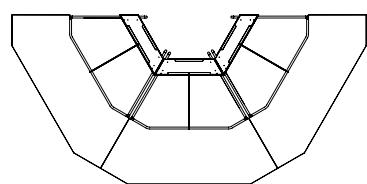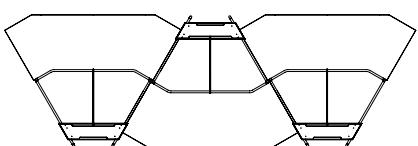

# Contact

## User Guide Mounting Video



**For additional information,  
please contact:**

[supportvrpod@mk2.com](mailto:supportvrpod@mk2.com)





©All Rights Reserved - 2018